




12' Pierce Shuffleboard

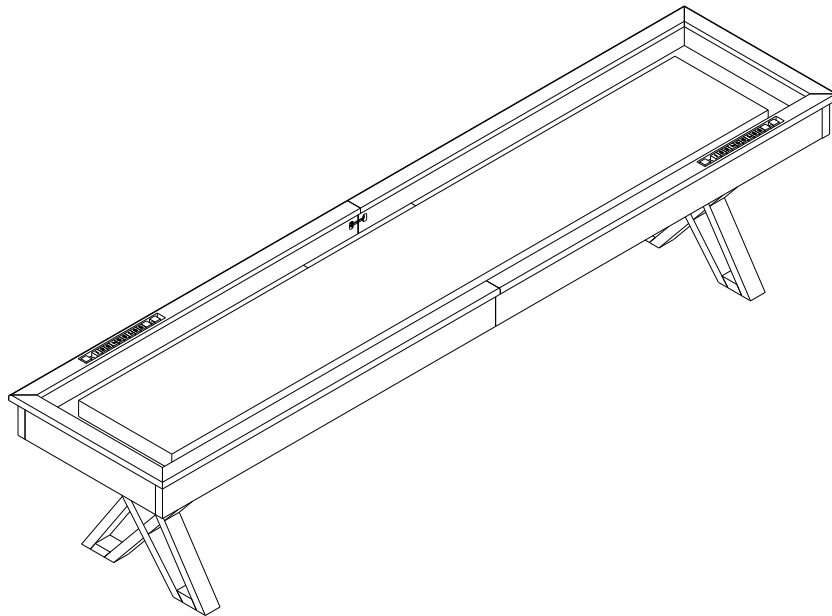

Installation Instructions

[illegible]



REPLACEMENT PARTS LIST(HARDWARE)				
PACKAGE	ITEM#		DESCRIPTION	QTY.
LEG	H1		HEX HEAD CROSS BOLT 3/8" x 2"(M10X51mm)	8
	H2		FLAT WASHER 3/8" I.D.	8
CABINET	H3		STUD BOLT 5/16" X 5-1/2"(M8X140mm)	2
	H4		FLAT WASHER 5/16" I.D.	4
	H5		HEX NUT 5/16" I.D.	4
	H6		HEX HEAD CROSS BOLT 5/16" X 1"(M8X25mm)	12
	H7		FLAT WASHER 5/16" I.D.	12
	H8		FLAT HEAD SCREW 1/8" X 3/4"(M3X19mm)	14
	H9		HEX HEAD CROSS BOLT 5/16" X 1"(M8X25mm)	48
	H10		FLAT WASHER 5/16" I.D.	48
	H11		CLIMATIC ADJUSTERS	4
	H12		FLAT HEAD SCREW 1/4" X 1-5/8"(M6X40mm)	6

FIG.1

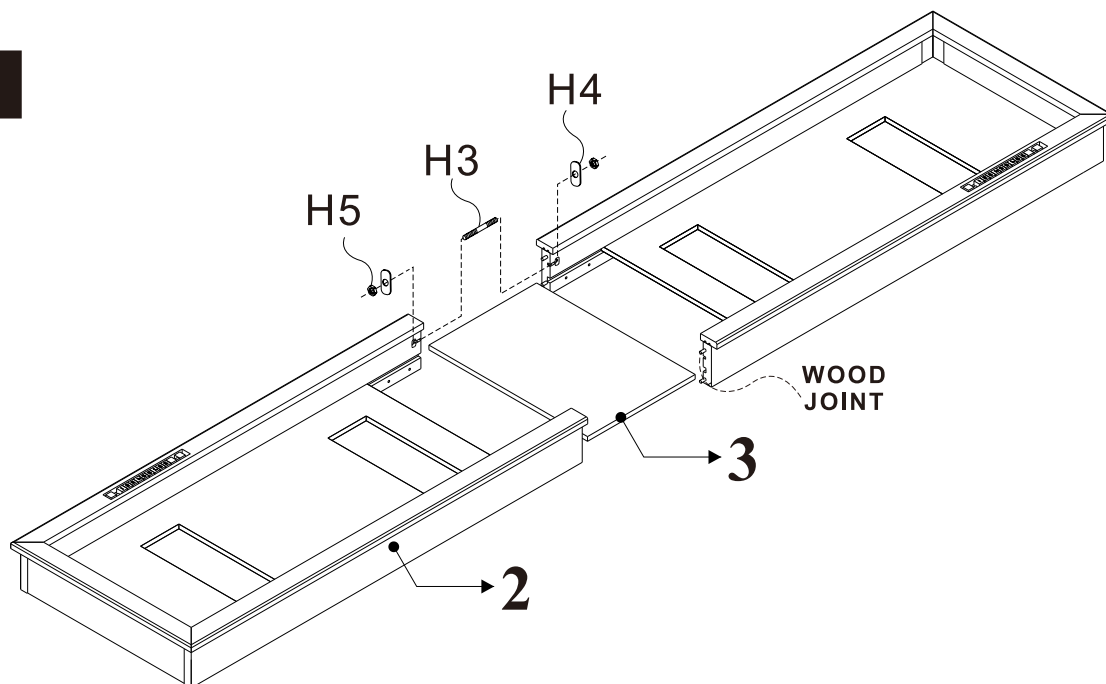


FIG.2

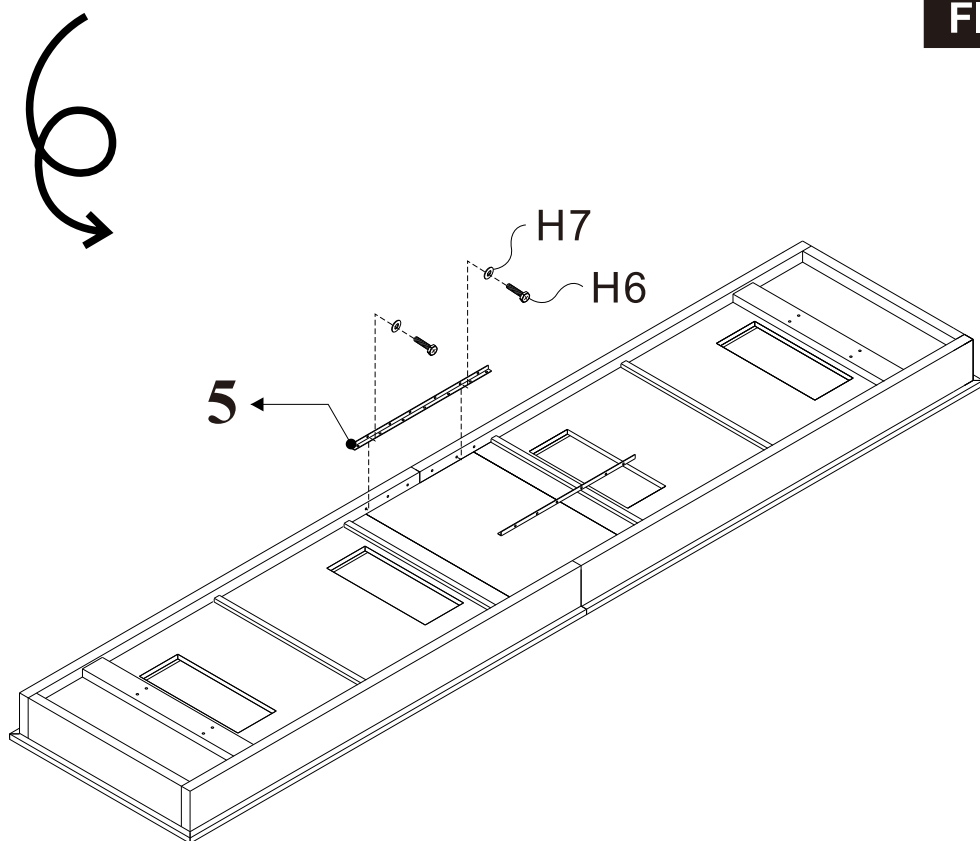


FIG.3


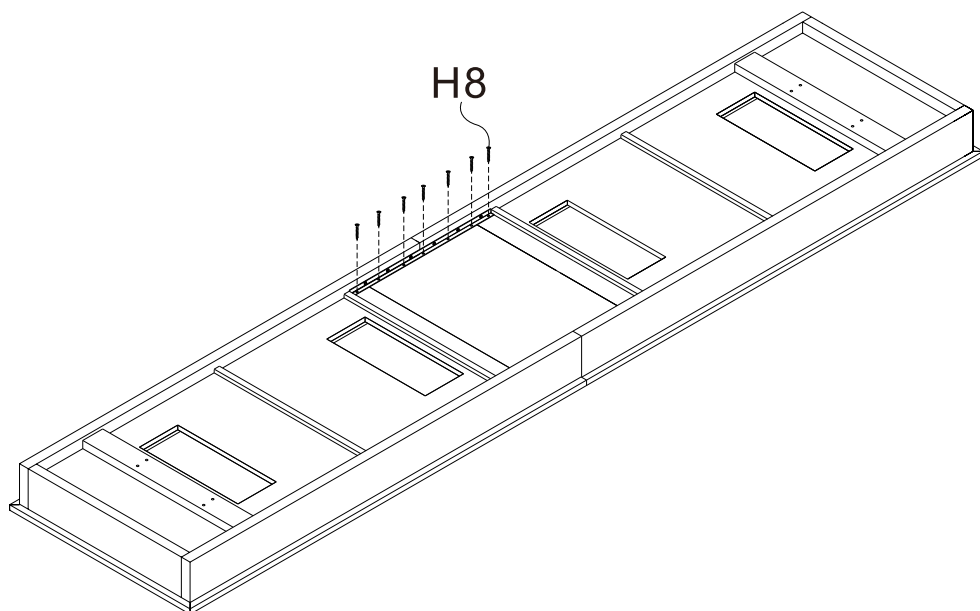


FIG.4

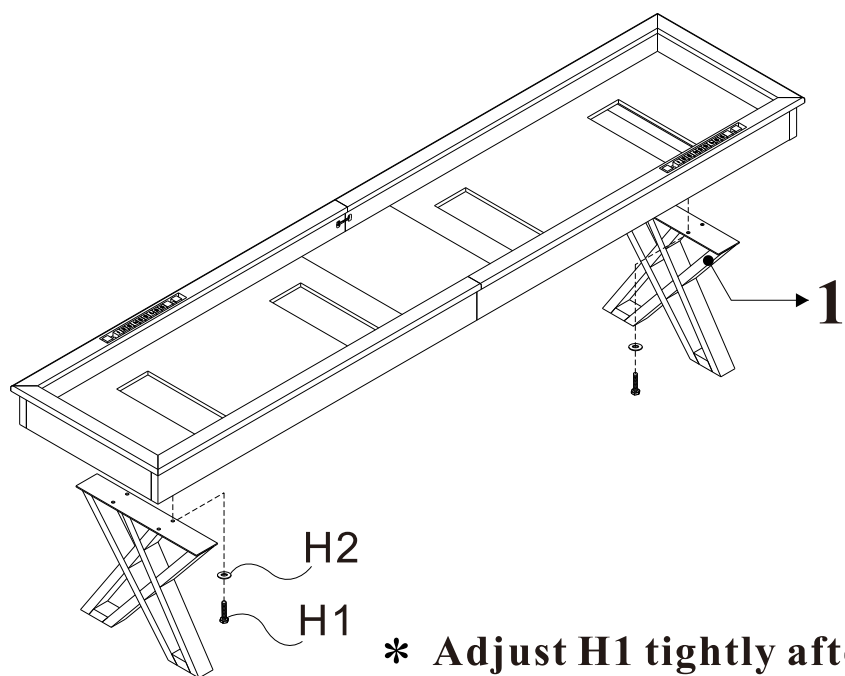

*** Adjust H1 tightly after cabinet is leveled**

FIG.5

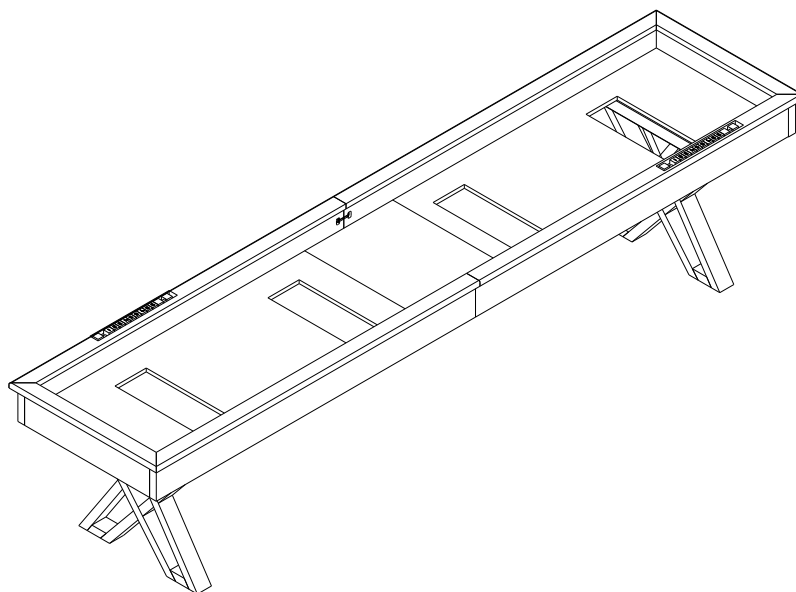


FIG.6


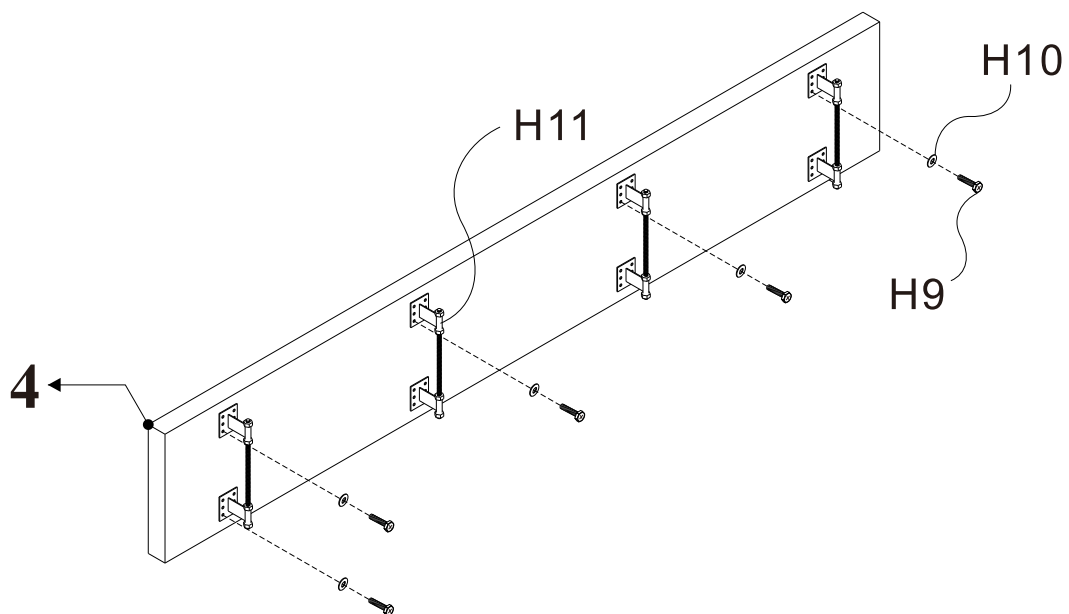


FIG.7

- * Drill some guiding-holes with a drill before attaching H12 screws.
(The diameter of the drill bit must be $\leq 3/16"$.)

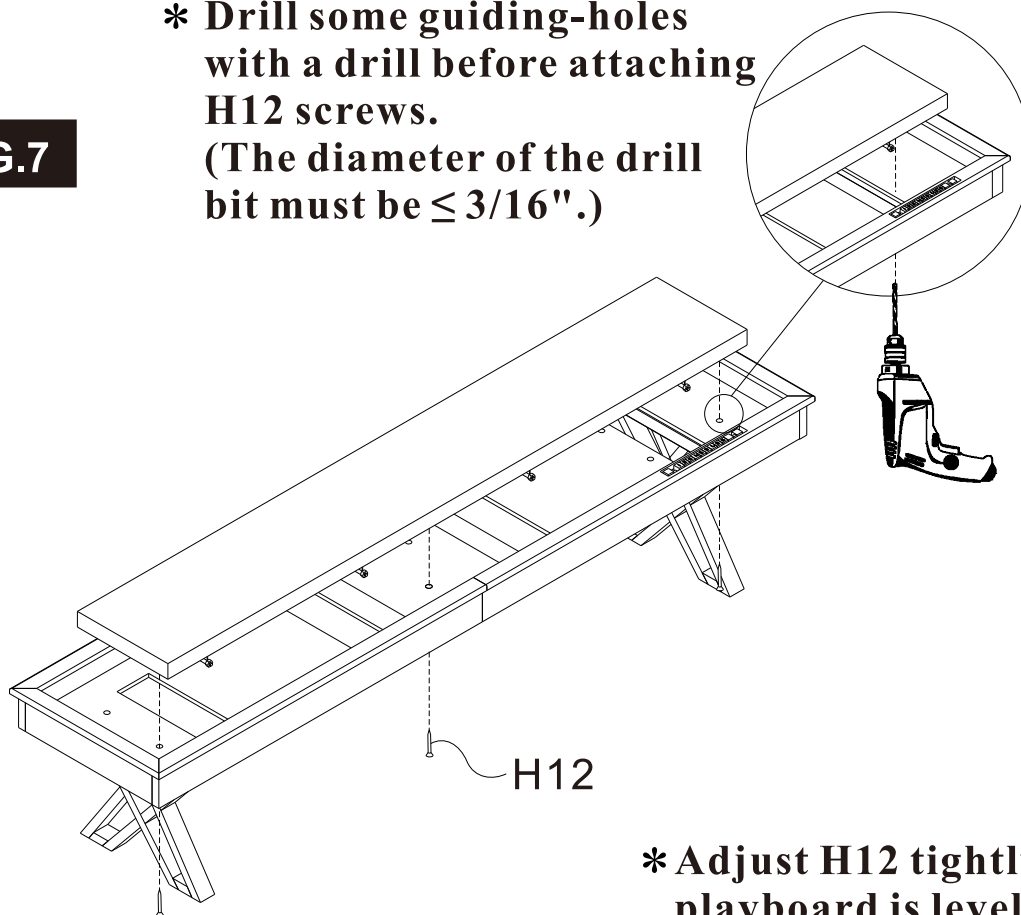

- * Adjust H12 tightly after playboard is leveled

Finish

