



BILLIARDS INSTRUCTION MANUAL

臺球桌安裝說明書

POOL 9' PRO



www.rasson.cn

MAY 2025

HARDWARE / 五金單

表1

PACKAGE 包裝	ITEM # 部件	SAMPLE 圖樣	DESCRIPTION 規格類型	QTY. 數量
LEG 桌腳	H1		STUD BOLT 5/16" X 5-1/2"(M8-18GX140mm)	8
	H2		FLAT WASHER 5/16" I.D.	16
	H3		HEX NUT 5/16" I.D.	16
	H4		HEX HEAD BOLT 3/8" x 3-1/8"(M10-16G x 80mm)	4
	H5		FLAT WASHER 3/8" I.D. x 30#	4
CABINET 大框	H6		T-HEAD BOLT 5/16" X 3/4"(M8 X 20mm)	102
	H7		FLANGE NUT 5/16" I.D.	102
	H8		INNER HEX BOLT 1/4" X 2-3/8"(M6 X 60mm)	18
	H9		LUCKNUT 1/4" I.D.	18
RAIL/POCKET/FRAME/SLATE 扶手 / 球袋 / 圍板 / 石板	H10		HEX HEAD BOLT 3/8" X 3-1/8"(M10-16G x 80mm)	12
	H11		FLAT WASHER 3/8" I.D. x 30#	12
	H12		NUT 3/8" I.D.	12
	H13		HEX HEAD CROSS BOLT 1/4" X 3/8"(M6 X 10mm)	16
	H14		FLAT WASHER 1/4" I.D. X 19#	16
	H15		HEX HEAD CROSS BOLT 5/16" X 11/16"(M8-18G X 17mm)	20
	H16		FLAT WASHER 5/16" I.D. x19#	20
	H17		HEX HEAD CROSS BOLT 5/16" X 3/4"(M8 X 20mm)	4
	H18		FLAT WASHER 5/16" I.D. x19#	4
	H19		HEX HEAD BOLT 3/8" X 2-9/16"(M10-16G X 65mm)	30






HARDWARE / 五金單

表2

PACKAGE 包裝	ITEM # 部件	SAMPLE 圖樣	DESCRIPTION 規格類型	QTY. 數量
	H20		FLAT WASHER 3/8" I.D. X 30#	60
	H21		SPRING LOCK WASHER 3/8" I.D.	30
OTHER 其它	H22		METAL BRACKET 85度角碼	10
	H23		FLAT HEAD SCREW-BLACK 8# X 1-3/16"(M4X30mm 彩鋅)	4
	H24		HEX HEAD SCREWS-COLOR 8# X 3/4"(M4.3 X 20mm- 彩鋅)	2
	H25		SLEEVE 套筒	1
	H26		HEX WRENCH #4 #4 六角扳手	1
	H27		HEX WRENCH #6 #6 六角扳手	1
	H28		WRENCH 扳手	1

PARTS LIST / 配件單

表1

PACKAGE 包裝	ITEM # 部件	SAMPLE 圖樣	DESCRIPTION 規格類型	QTY. 數量
LEG 桌腳	1		LEG 腳	2
	2		PANEL 圍板	2
	3		LEG-BEAM 鋼挑梁	2
CABINET/BEAM 鋁大框	4		SIDE BEAM 長邊鋁框	2
	5		END BEAM 端邊鋁框	2
	6		MIDDLE BEAM 中間鋁框	2
	7		CORNER JOINTER(BEAM) 鋁大框角碼	8
	8		LEVELBOX PLUS 調整器	22
	9		ALUMINIUM BRACKET(SLATE) 石板鋁三角件	18
APRON 裙板	10		APRON JOINT CORNER BLOCK 裙板鋁護角	4
	11		END APRON 端邊裙板	2
	12		SIDE APRON 長邊裙板	2
TOP RAIL 扶手	13		TOP RAIL LEFT SIDE 左扶手	2
	14		TOP RAIL RIGHT SIDE 右扶手	2
	15		TOP RAIL END 端邊扶手	2
	16		CORNER POCKET 五金角袋	4
	17		SIDE POCKET 五金中袋	2

PARTS LIST / 配件單

表2


PACKAGE 包裝	ITEM # 部件	SAMPLE 圖樣	DESCRIPTION 規格類型	QTY. 數量
POCKET 球袋	18		PLASTIC CORNER POCKET 塑膠角袋	4
	19		PLASTIC SIDE POCKET 塑膠中袋	2
SLATE 石板	20		SLATE (LEFT) 石板 (左)	1
	21		SLATE (CENTER) 石板 (中)	1
	22		SLATE (RIGHT) 石板 (右)	1
	23		CLOTH 臺尼	1
HOOK 掛鉤	24		BRIDGE HOLDER 架杆鉤	2
	25		ACCESSORY HOOK 三角框掛鉤	1
	26		WOOD JOINT 木梢	8

FIG 1

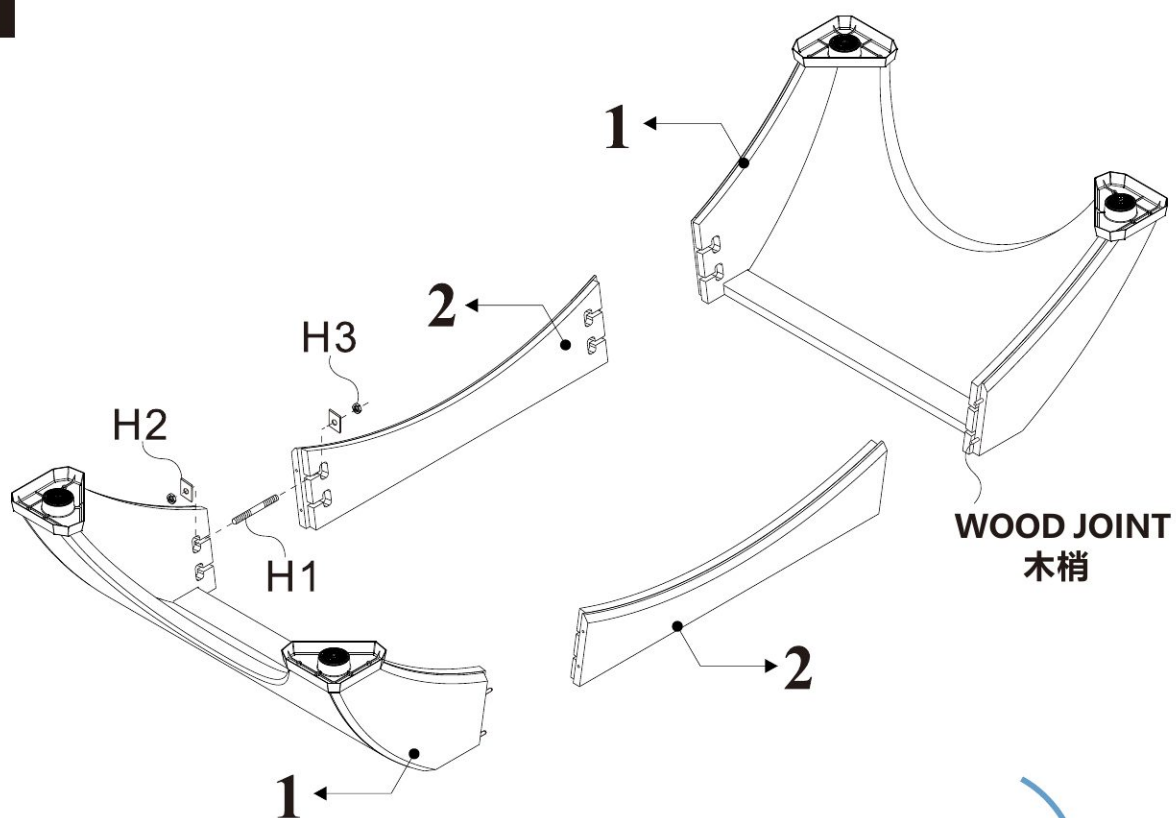


FIG 2

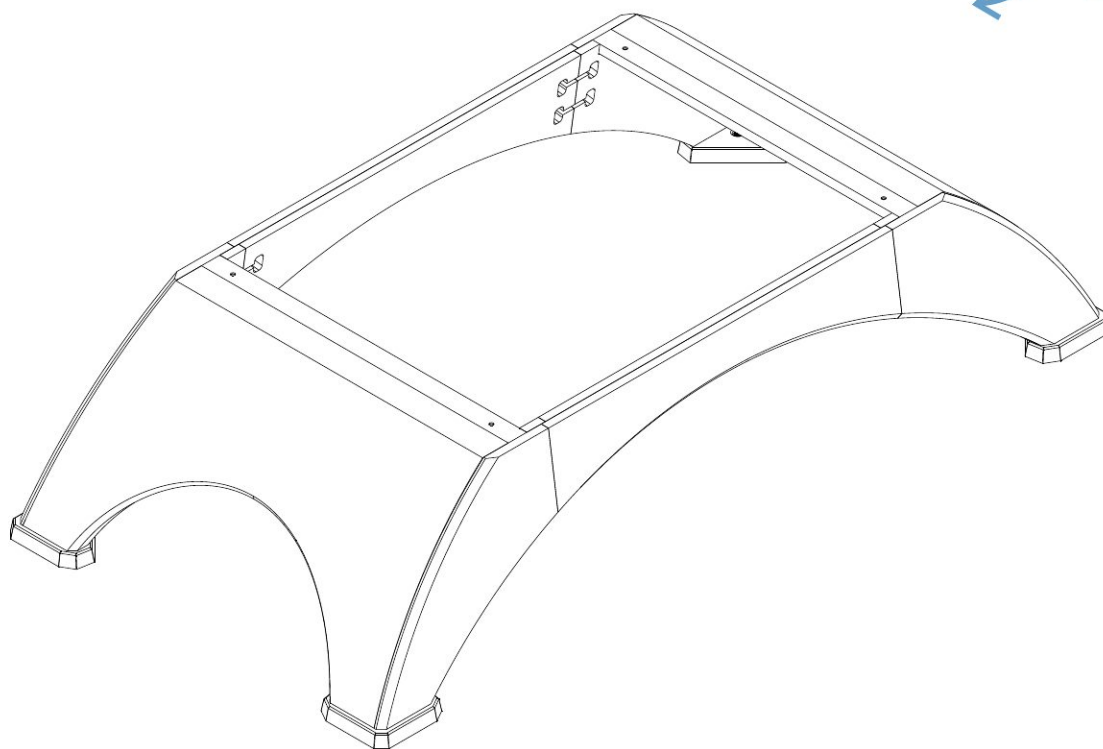


FIG 3


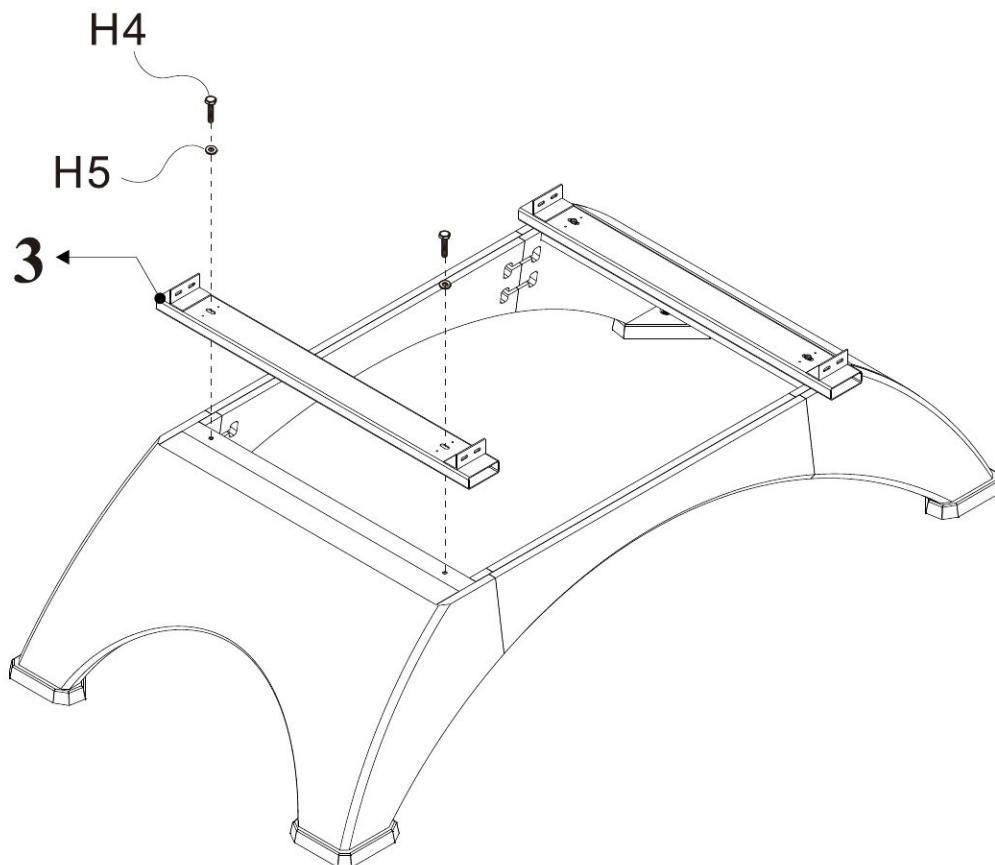



FIG 4

* Slate position line stand
for the top.
石板位置綫朝頂面

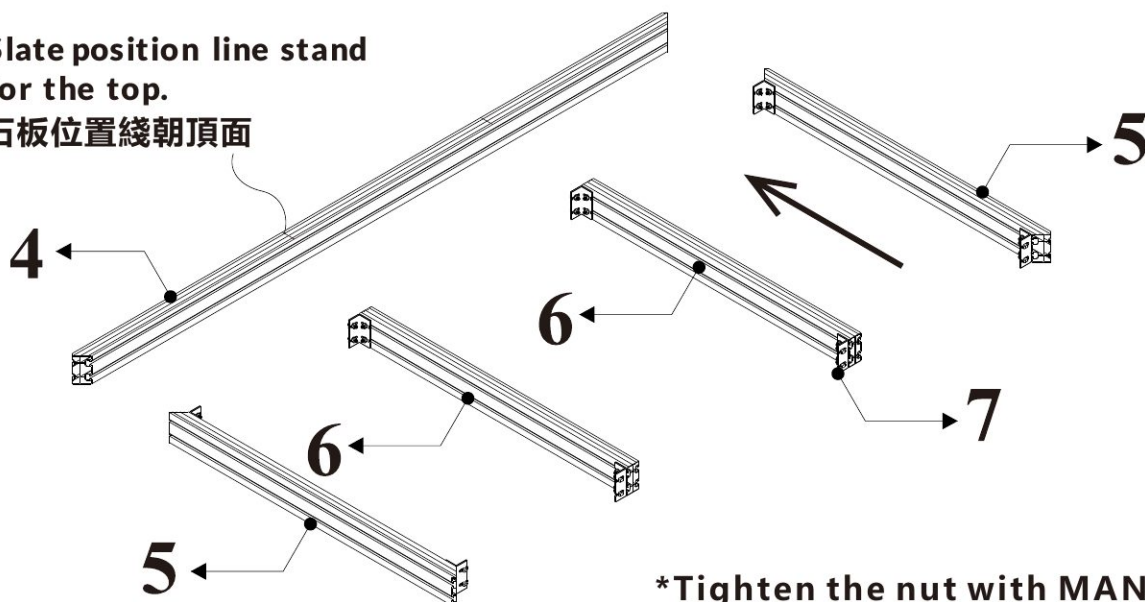

*Tighten the nut with MANUAL
wrench (DON' T use electric tool).
使用工具手動擰緊螺杆 (勿用電動工具)

FIG 5

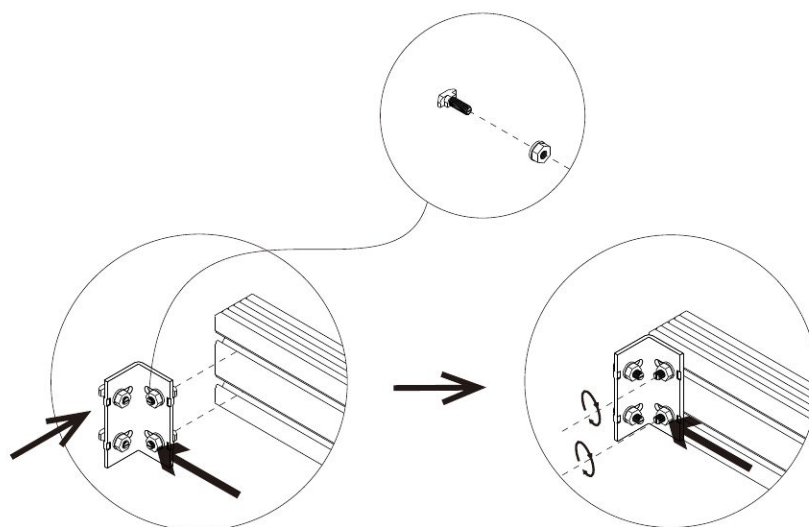

***Turn the bolt to horizontal position, then insert 7 into alluminium alloy beam.**

把鋁框大角碼7的T形螺桿旋轉成橫向狀態, 插入到鋁框上方鋁槽


***Turn the bolt to vertical position, then tighten the nut.**

T形螺桿旋轉成垂直狀態, 擰緊螺桿鎖緊鋁框大角碼7

FIG 6

*** Middle beam need to line up with the slate position line.**

中間鋁框對齊到石板綫中心

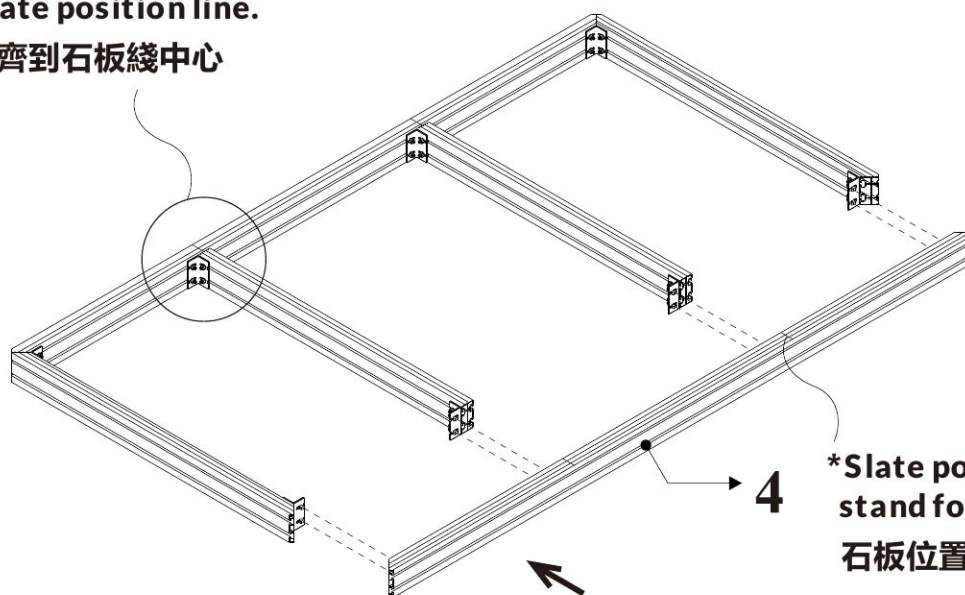


***Slate position line stand for the Top.**

石板位置綫朝頂面

FIG 7

***Tighten the nut with MANUAL wrench (DON' T use electric tool).**

**使用工具手動擰緊螺杆
(勿用電動工具)**

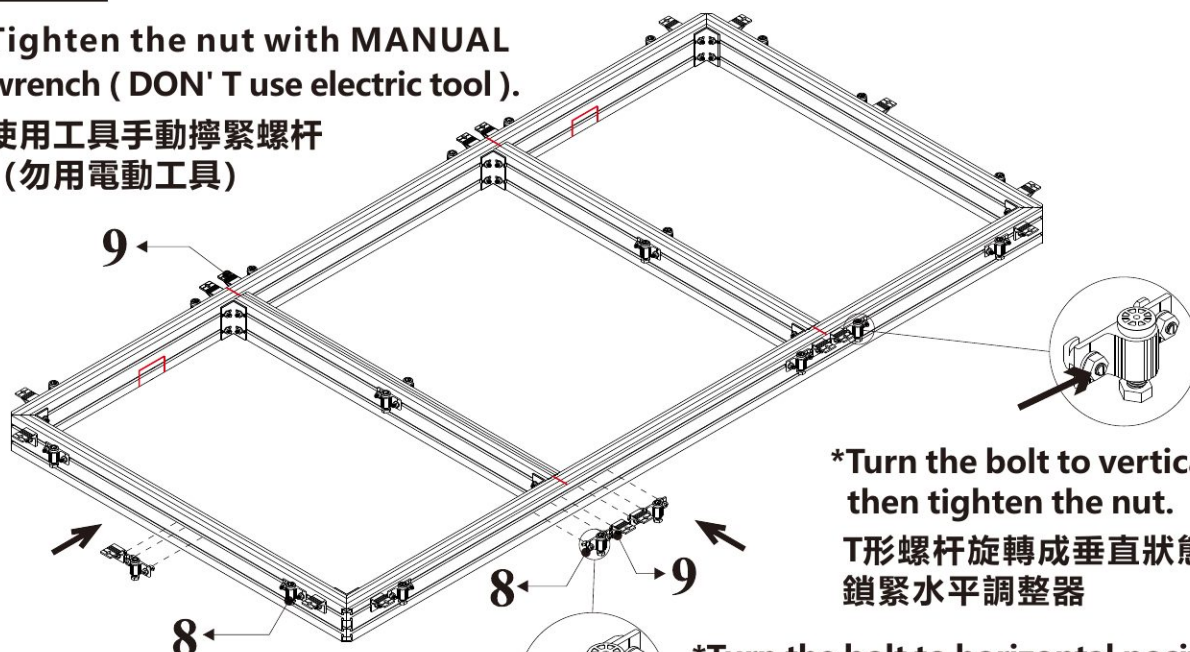

***LevelBox Plus at the Top.
水平調整器在上方鋁槽**

***Turn the bolt to vertical position, then tighten the nut.**

T形螺杆旋轉成垂直狀態,擰緊螺杆鎖緊水平調整器

***Turn the bolt to horizontal position , then insert 8 into alluminium alloy beam 4.**

把水平調整器8 T形螺杆旋轉成橫向狀態, 插入到長邊鋁框4 上方鋁槽

FIG 8

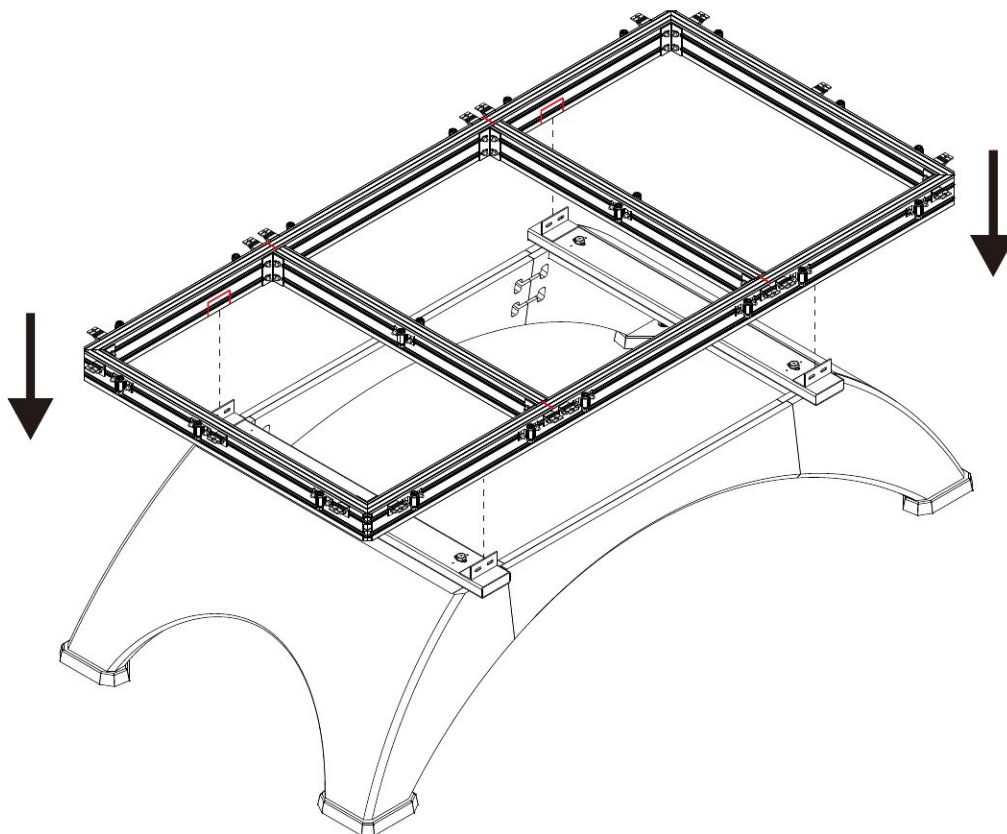


FIG 9


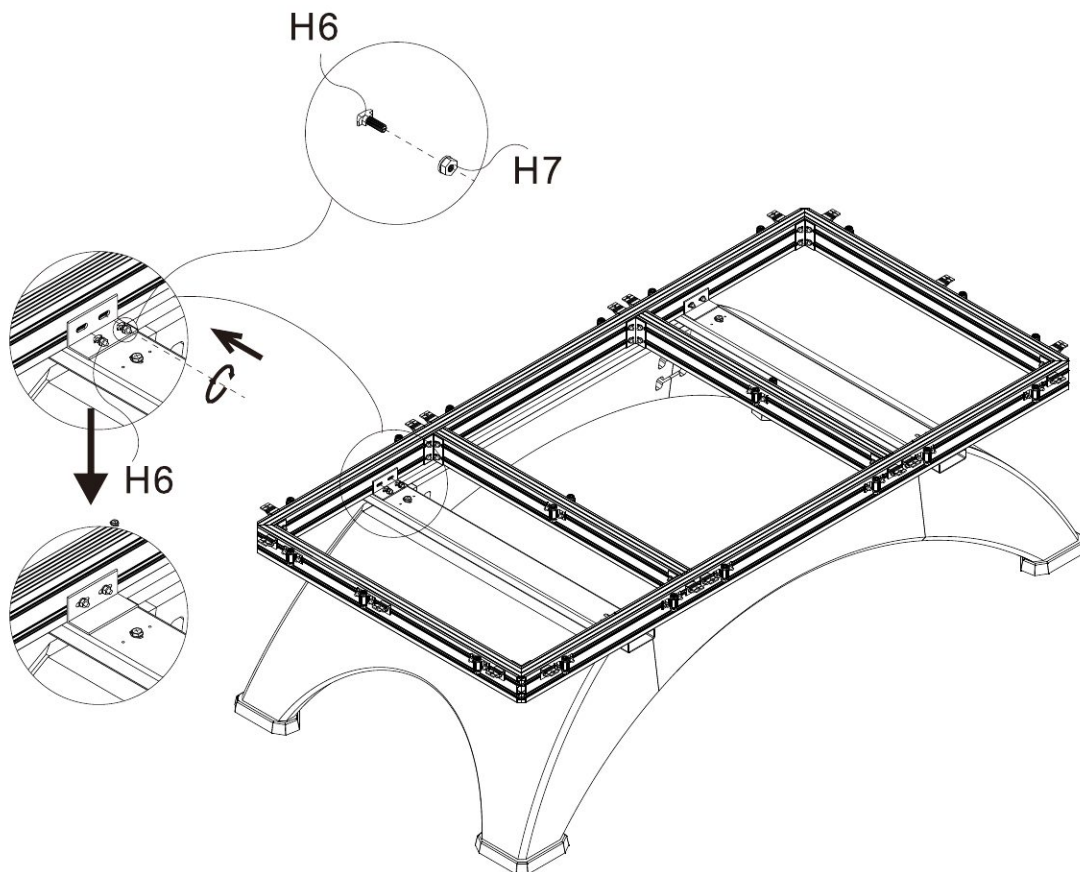



FIG 10

***Level Gauge**
水平儀

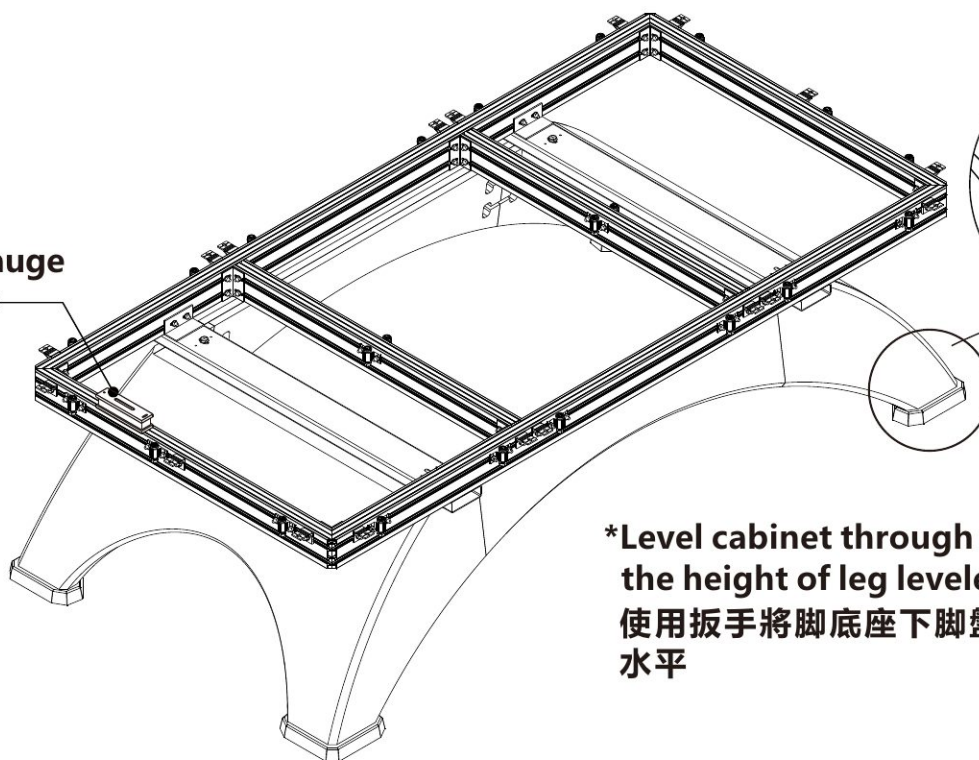

***Level cabinet through wrench adjusting the height of leg levelers.**
使用扳手將腳底座下腳盤調節鋁大框表面水平


FIG 11

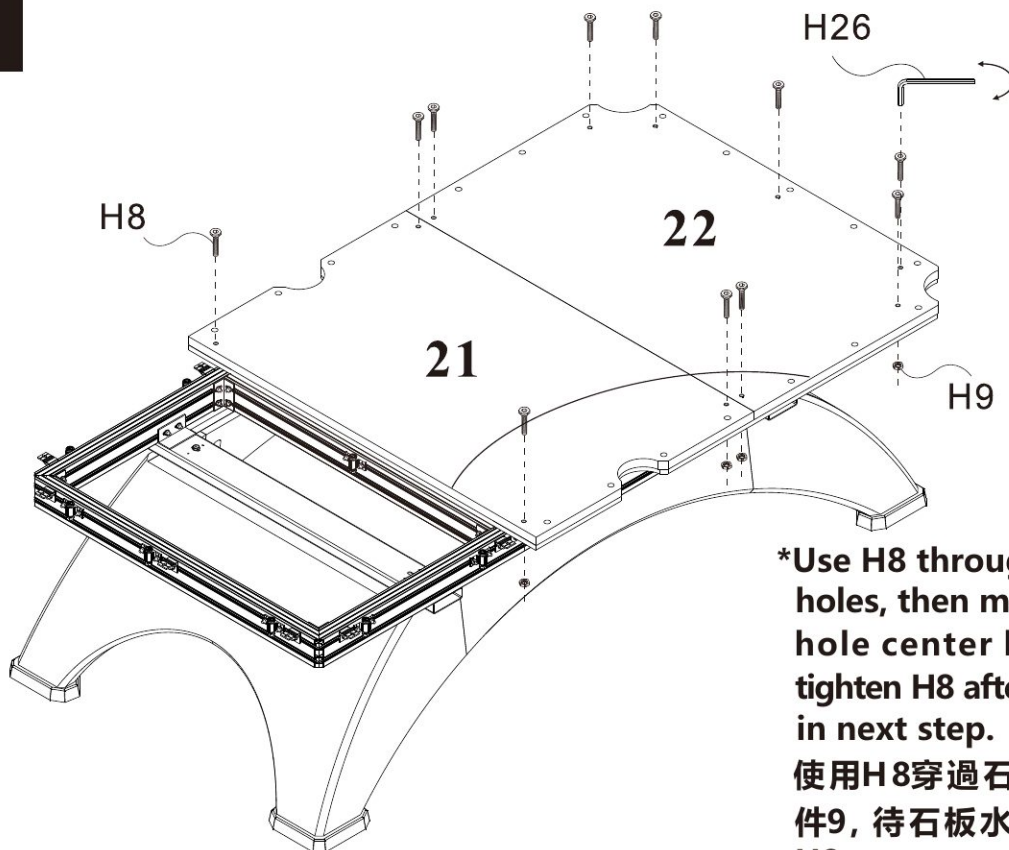

*Use H8 through slate stepped holes, then move H9 to make its hole center line up with H8 tighten H8 after slate be leveled in next step.

使用H8穿過石板鎖到石板連接件9，待石板水平調整後再緊固H8

FIG 12

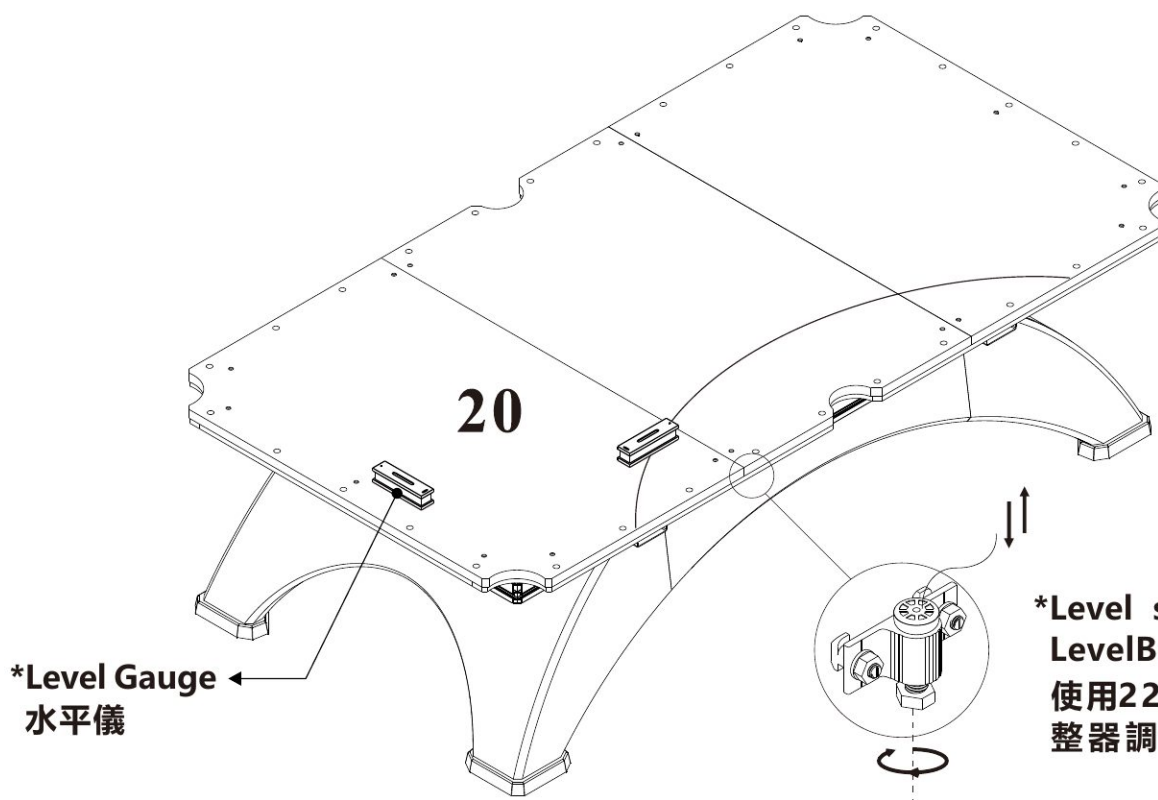


*Level Gauge
水平儀

*Level slate with 22 LevelBox adjusters.
使用22個石板水平調整器調節水平

FIG 13

***Cut holes in cloth at rail both locations.**

石板螺杆孔開洞

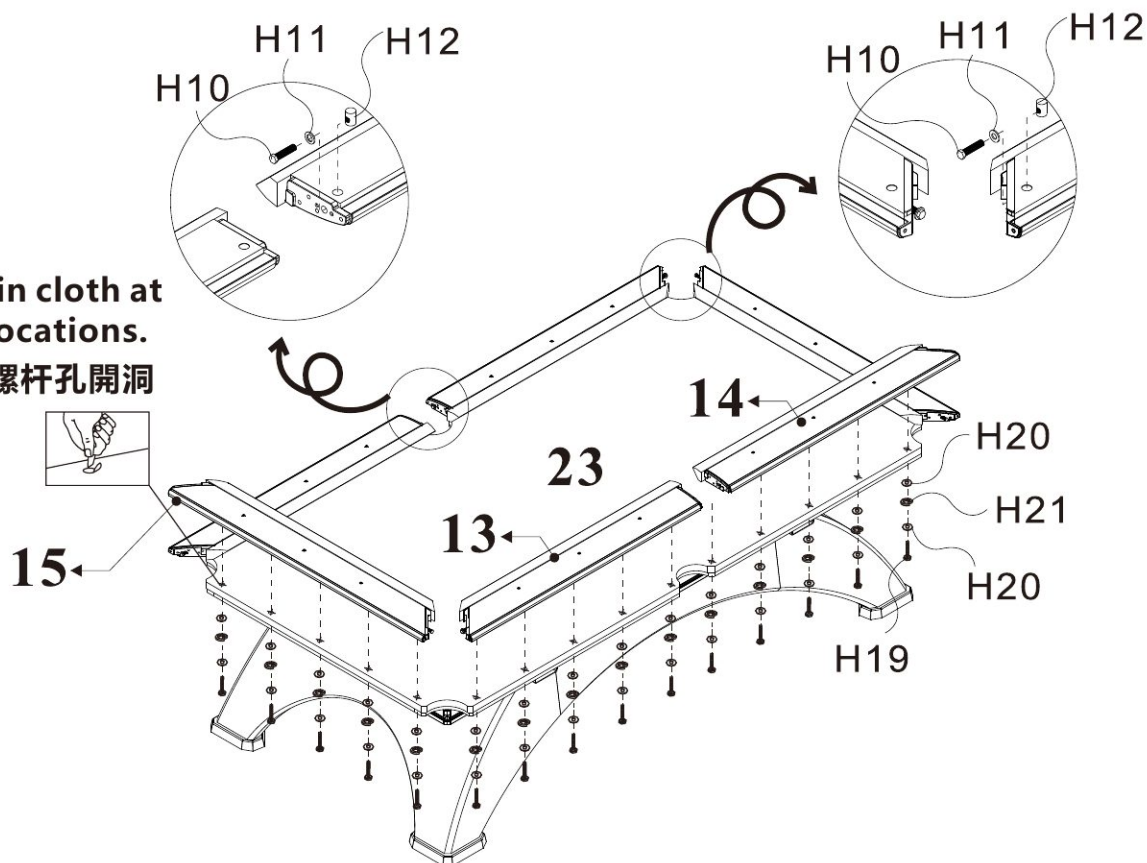

***Pre-attach the H10 bolts, then tighten them after attaching the Corner Pocket 16 and Middle Pocket 17 to rails.**

請先將H10螺桿與扶手預裝, 待下一步安裝五金角袋16 和五金中袋17 插入扶手後再擰緊。

FIG 14


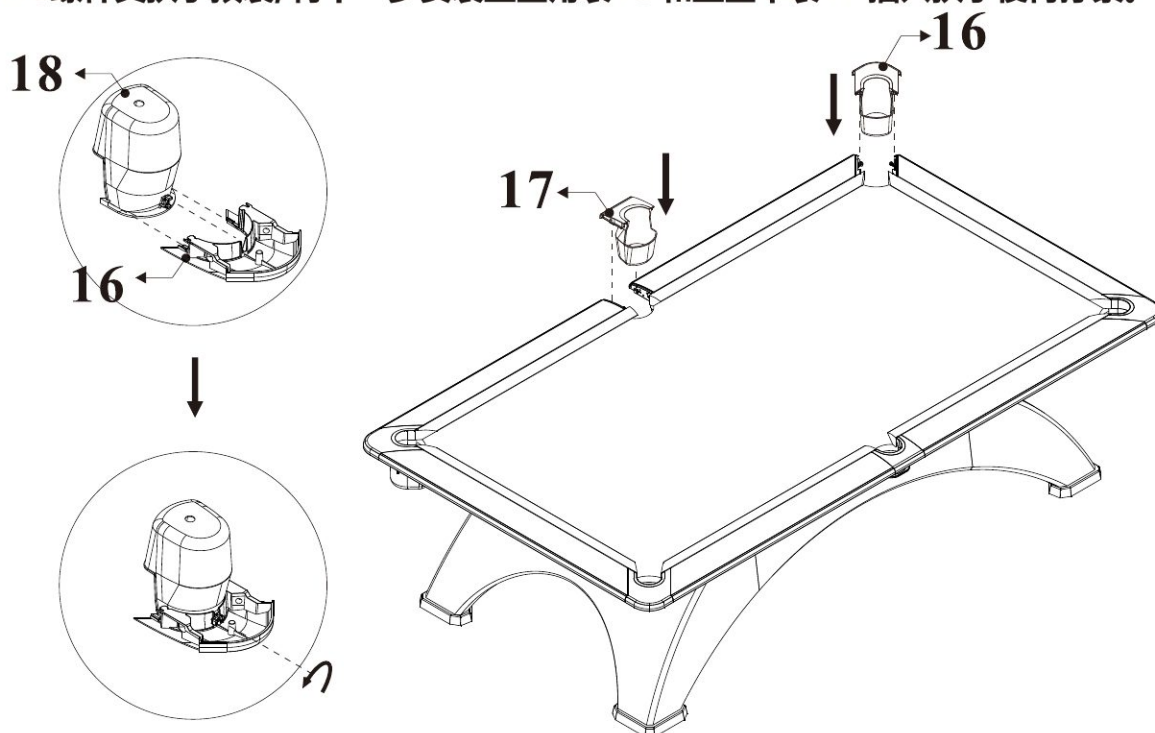


FIG 15

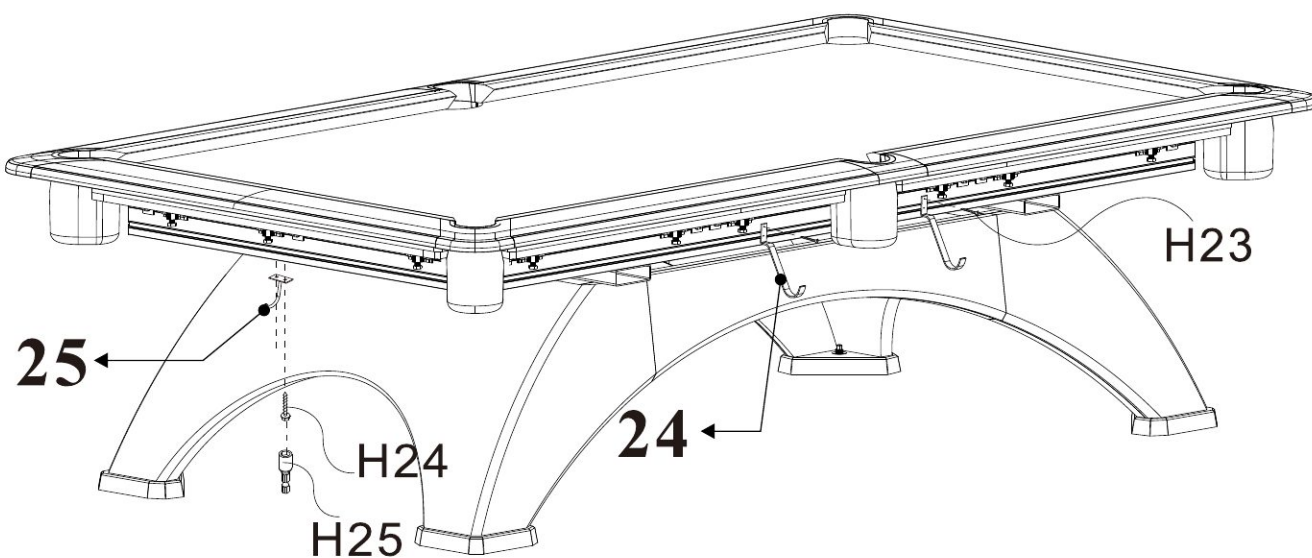

***Attach the bridge hook 24 to the side beam 4.**
架杆鈎鎖到鋁大框

FIG 16



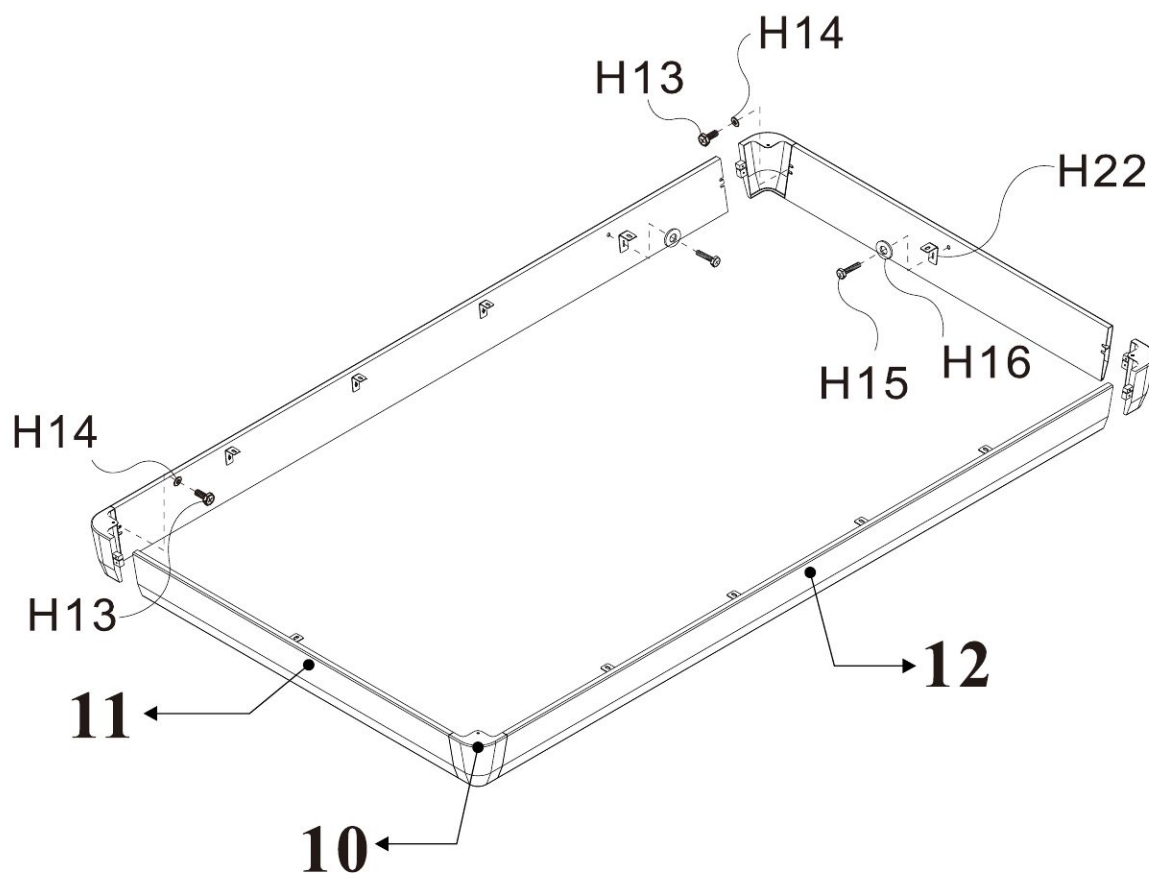


FIG 17



FINISH

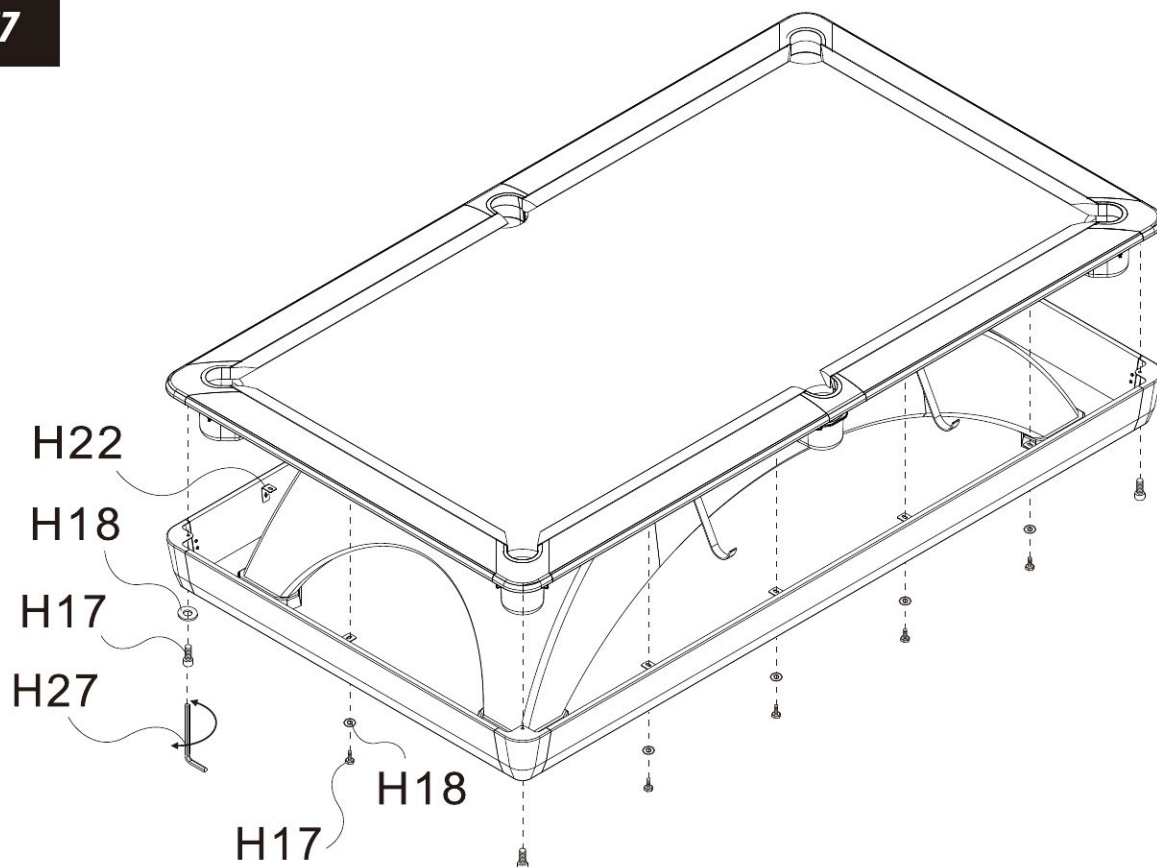

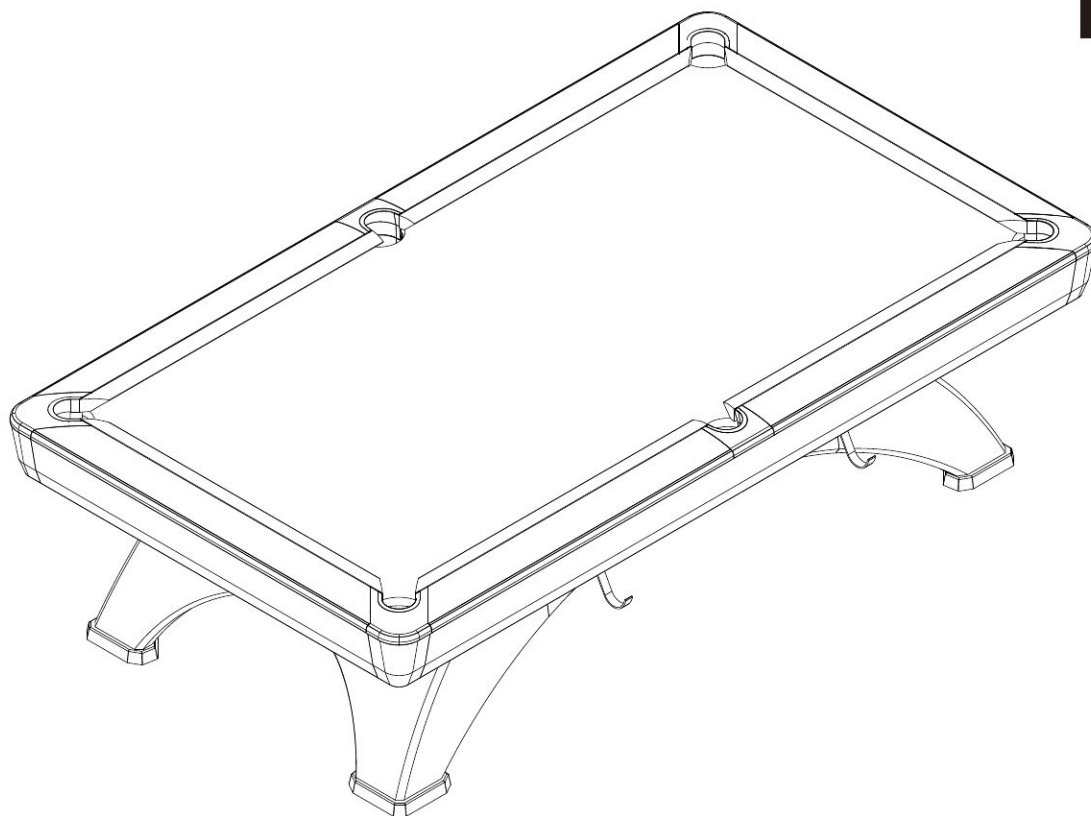

No.18th Floor, Weiyangyipin Building, Laying Plaza, Bali Lake New District,
Jiujiang City, Jiangxi Province, China



kevina@rasson.cn



+86-792-898-6880



RASSON

