


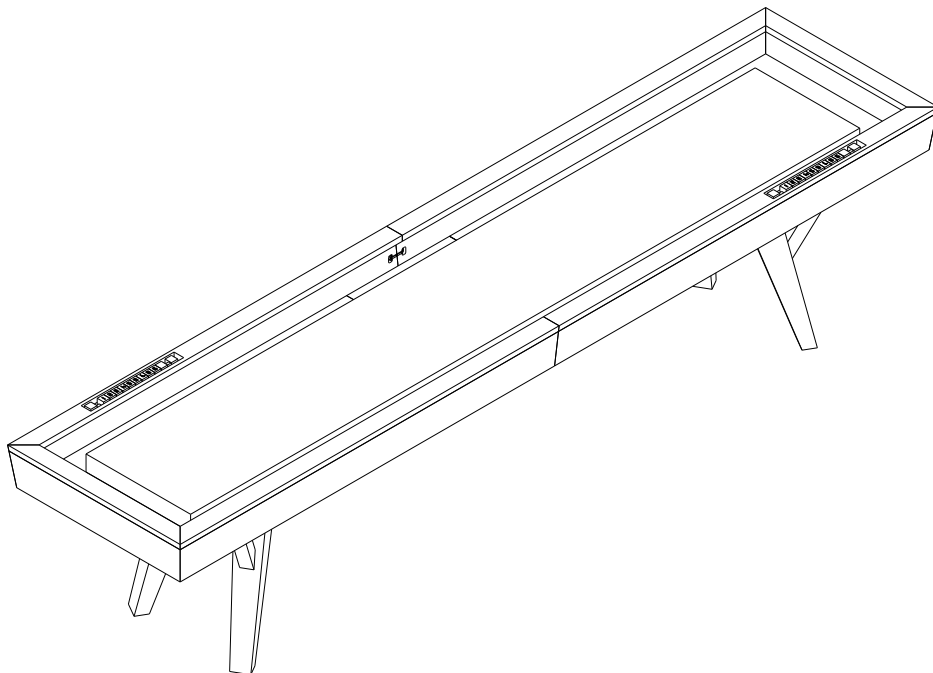

12' Tyler Shuffleboard



Installation Instructions

[illegible]

Tyler Shuffleboard Hardware



PACKAGE	ITEM#		DESCRIPTION	QTY.
LEG	H1		HEX HEAD CROSS BOLT 5/16" X 2"(M8X51mm)	12
	H2		FLAT WASHER 5/16" I.D.	12
	H3		HEX NUT 5/16" I.D.	12
CABINET	H4		STUD BOLT 5/16" X 5-1/2"(M8X140mm)	2
	H5		FLAT WASHER 5/16" I.D.	4
	H6		HEX NUT 5/16" I.D.	4
	H7		HEX HEAD CROSS BOLT 5/16" X 1"(M8X25mm)	12
	H8		FLAT WASHER 5/16" I.D.	12
	H9		FLAT HEAD SCREW 1/8" X 3/4"(M3X19mm)	14
	H10		HEX HEAD CROSS BOLT 5/16" X 1"(M8X25mm)	48
	H11		FLAT WASHER 5/16" I.D.	48
	H12		CLIMATIC ADJUSTERS	4
	H13		FLAT HEAD SCREW 1/4" X 1-5/8"(M6X40mm)	6

FIG.1

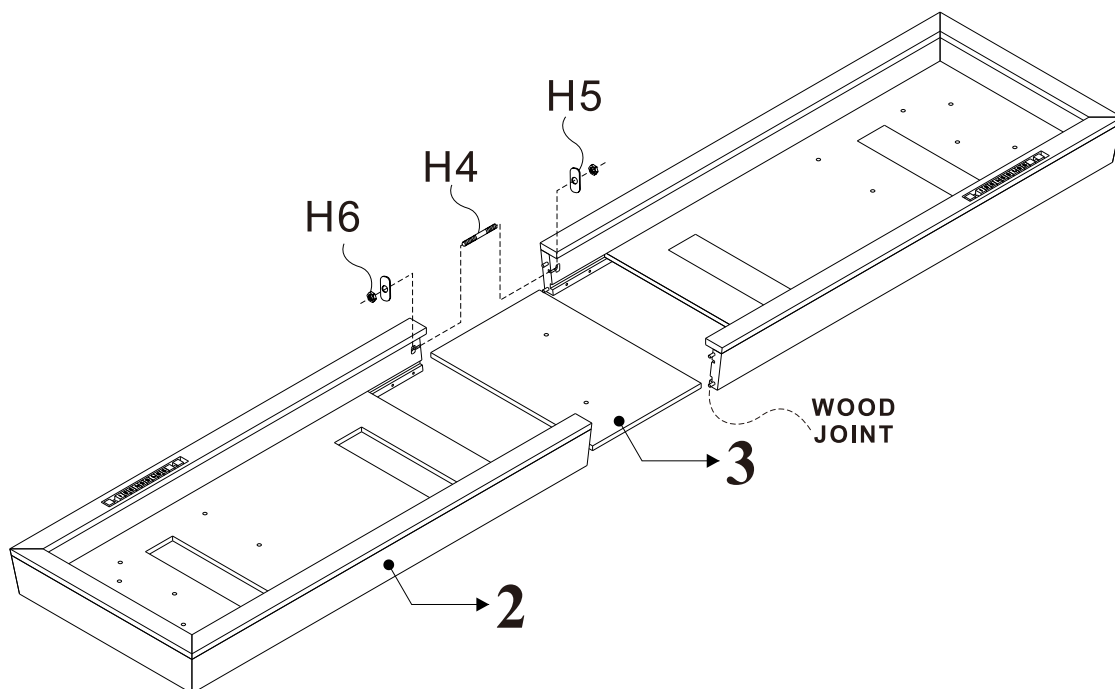


FIG.2

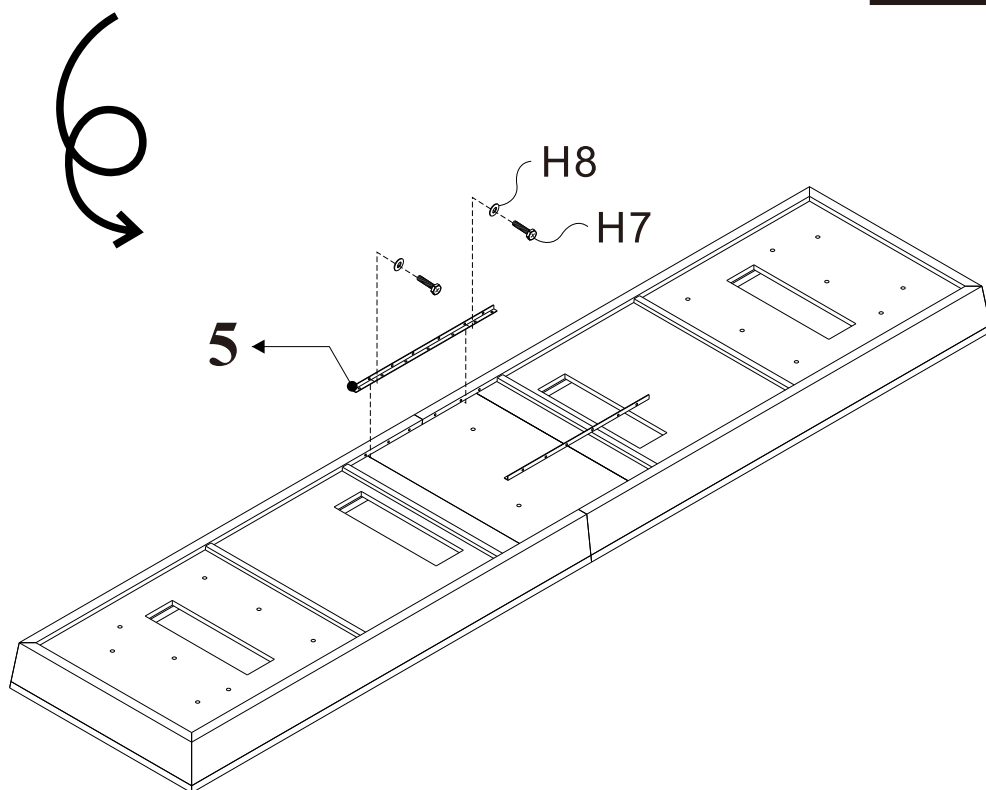


FIG.3



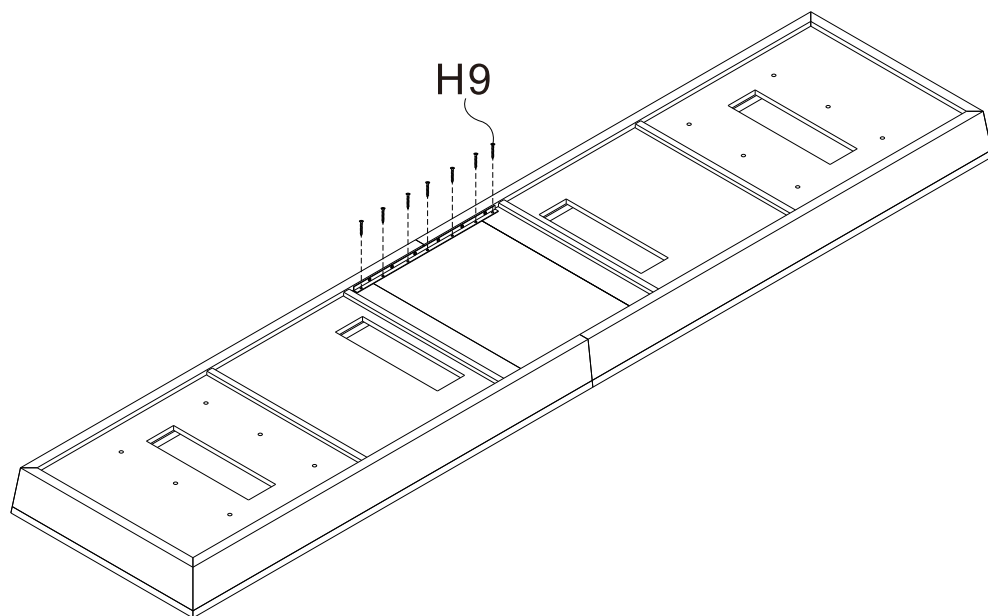


FIG.4

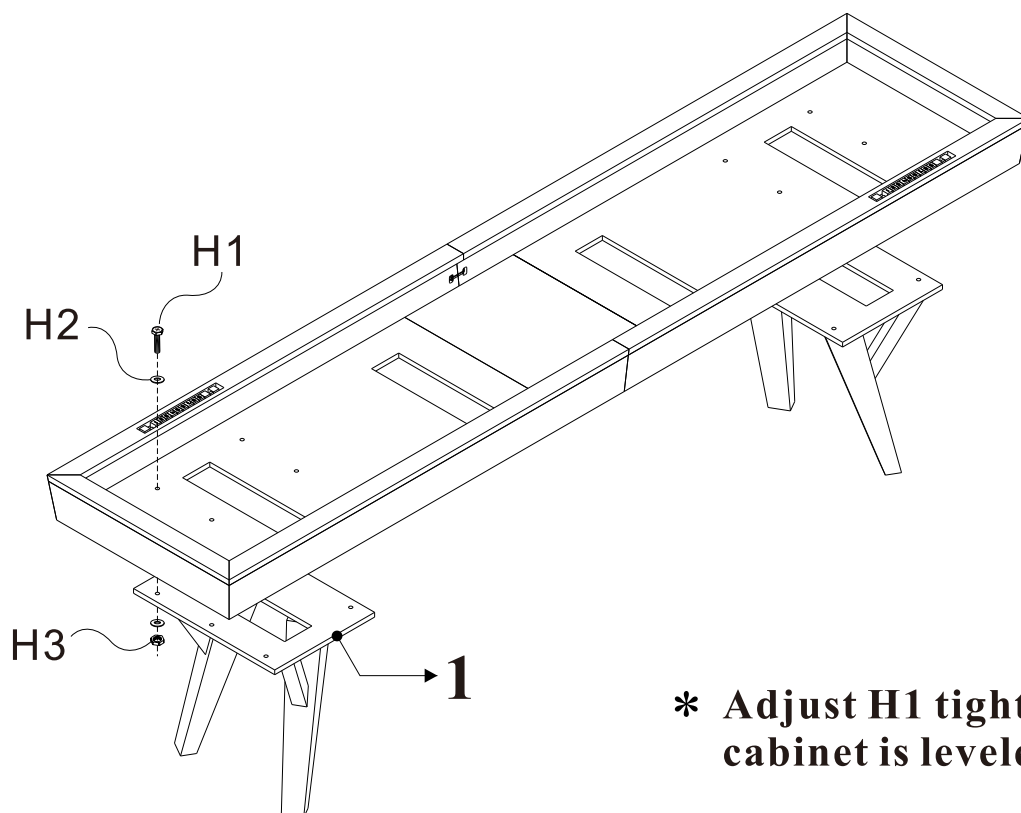


*** Adjust H1 tightly after cabinet is leveled**

FIG.5

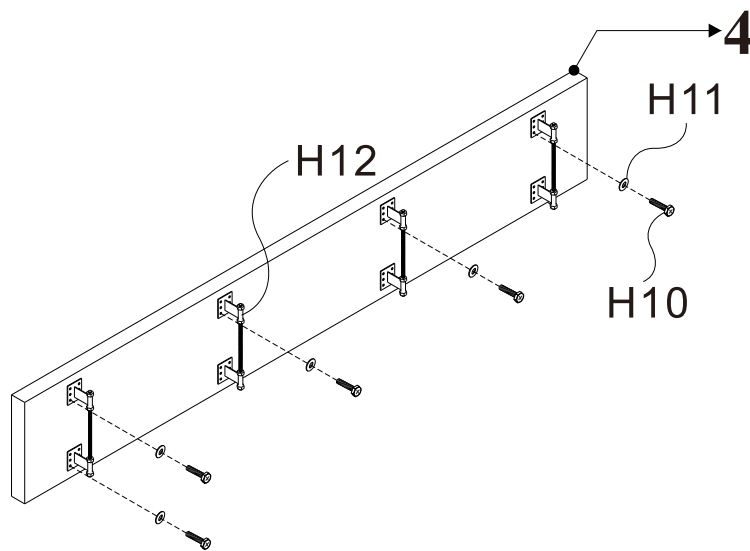

*** Drill some guiding-holes
with a drill before attaching
H13 screws.
(The diameter of the drill
bit must be $\leq 3/16$ ".)**

FIG.6

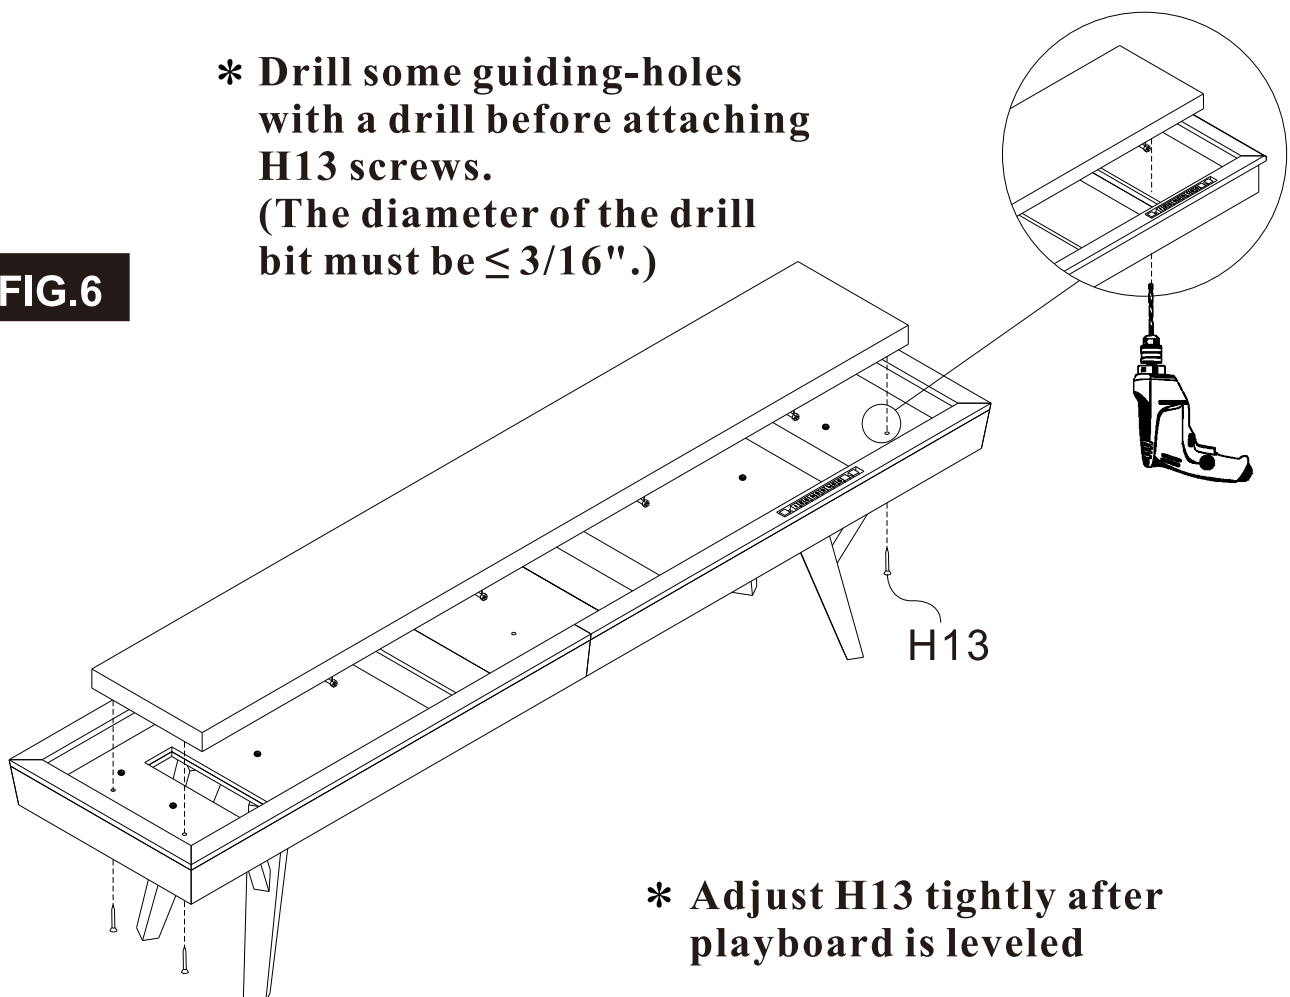

Finish

