


PRESIDENTIAL BILLIARDS, L.P.

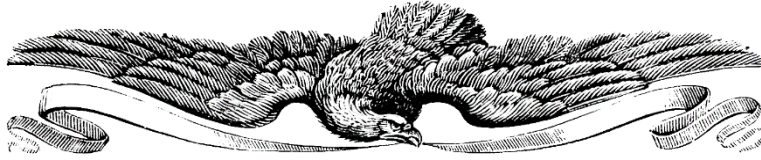

Installer Instructions Eastland Pub Chair

1. Unpack all parts and lay on flat clean surface.
2. Place bottom footrest in bottom set of holes on one side of upright. Place dowel nut in hole in backside of footrest and align using flathead screwdriver. Place screw thru upright into footrest and loosely tighten.
3. Repeat for other footrest.
4. Place top seat rest in top set of holes on one side of upright. Place dowel nut in hole in backside of top seat rest and align using flathead screwdriver. Place screw thru upright into seat rest and loosely tighten.
5. Repeat for other seat rest.
6. Place other upright on dowels on seat rest and footrest and tap with rubber mallet if necessary. Loosely tighten using dowel nuts and screws as you did on other side.
7. Once all screws are started, tighten altering sides as you tighten each side.
8. Place seat upside down on clean flat surface. Place stool seat rest on seat and align. Use screws to attach seat to base.
9. If not attached, use rubber mallet to tap feet glides into each leg.

NU1846	1/4" – 20 x 3" Bolt	12
JDC14201606	1/4 - 20 x 16mm Dowel	12
123137	#8 – 11 x 1.5 Wood Screw	6