

POOL 7/8/9' PRO

IRONMAN



BILLIARDS INSTRUCTION MANUAL

RASSON


MAY.2025



www.rasson.cn

HARDWARE









1

PACKAGE	ITEM #	SAMPLE	DESCRIPTION	QTY.
LEG	H1		HEX HEAD CROSS BOLT 3/8" X 2-3/8"(M10 x 60mm)	16
	H2		FLAT WASHER 3/8" I.D. x #28	16
	H3		HEX HEAD BOLT 3/8" X 3-5/32"(M10-16G x 80mm)	4
	H4		FLAT WASHER 3/8" I.D. x #28	4
	H5		NUT 3/8" I.D.	4
CABINET	H6		FLAT HEAD SCREW-COLORED 10# X 2-5/32"(M5 x 55MM)	12
	H7		HEX HEAD BOLT 3/8" X 3-1/8"(M10-16G x 80mm)	8
	H8		HEX HEAD BOLT 3/8" X 2-9/16"(M10-16G x 65mm)	4
	H9		FLAT WASHER 3/8" I.D. x #22	12
	H10		NUT 3/8" I.D.	12
RAIL/POCKET/FRAME/SLATE	H11		HEX HEAD CROSS BOLT 5/16" X 11/16"(M8-18G x 17mm)	36
	H12		FLAT WASHER 5/16" I.D. x #20	36
	H13		HEX HEAD CROSS BOLT 1/4" X 1"(M6-20G x 17mm)	16
	H14		FLAT WASHER 1/4" I.D. x #18	16
	H15		HEX HEAD BOLT 3/8" X 2-9/16"(M10-16G x 65mm)	18
	H16		FLAT WASHER 3/8" I.D. x #28	36
	H17		SPRING LOCK WASHER 3/8" I.D.	18
	H18		WRENCH	1
	H19		METAL BRACKET	18

HARDWARE				
PACKAGE	ITEM #	SAMPLE	DESCRIPTION	QTY.
	H20		FLAT HEAD SCREW 4# X 2 1/32" (M3 x 17mm)	6

PARTS LIST

1

PACKAGE	ITEM #	SAMPLE	DESCRIPTION	QTY.
LEG	1		LEG	4
	2		END LEG BEAM	2
	3		SIDE LEG BEAM	2
CABINET/BEAM	4		MIDDLE BEAM	2
	5		END APRON	2
	6		SIDE APRON	2
APRON	7		METAL CORNER	4
	8		TOP RAIL LEFT SIDE	2
	9		TOP RAIL RIGHT SIDE	2
TOP RAIL	10		TOP RAIL END	2
	11		CORNER POCKET	4
	12		SIDE POCKET	2
POCKET	13		PLASTIC CORNER POCKET	4
	14		PLASTIC SIDE POCKET	2
	15		SLATE (LEFT)	1
SLATE	16		SLATE (CENTER)	1
	17		SLATE (RIGHT)	1

PARTS LIST


PACKAGE	ITEM #	SAMPLE	DESCRIPTION	2
				QTY.
	18		CLOTH	1
	19		BRIDGE HOLDER	2
	20		ACCESSORY HOOK	1

FIG 1

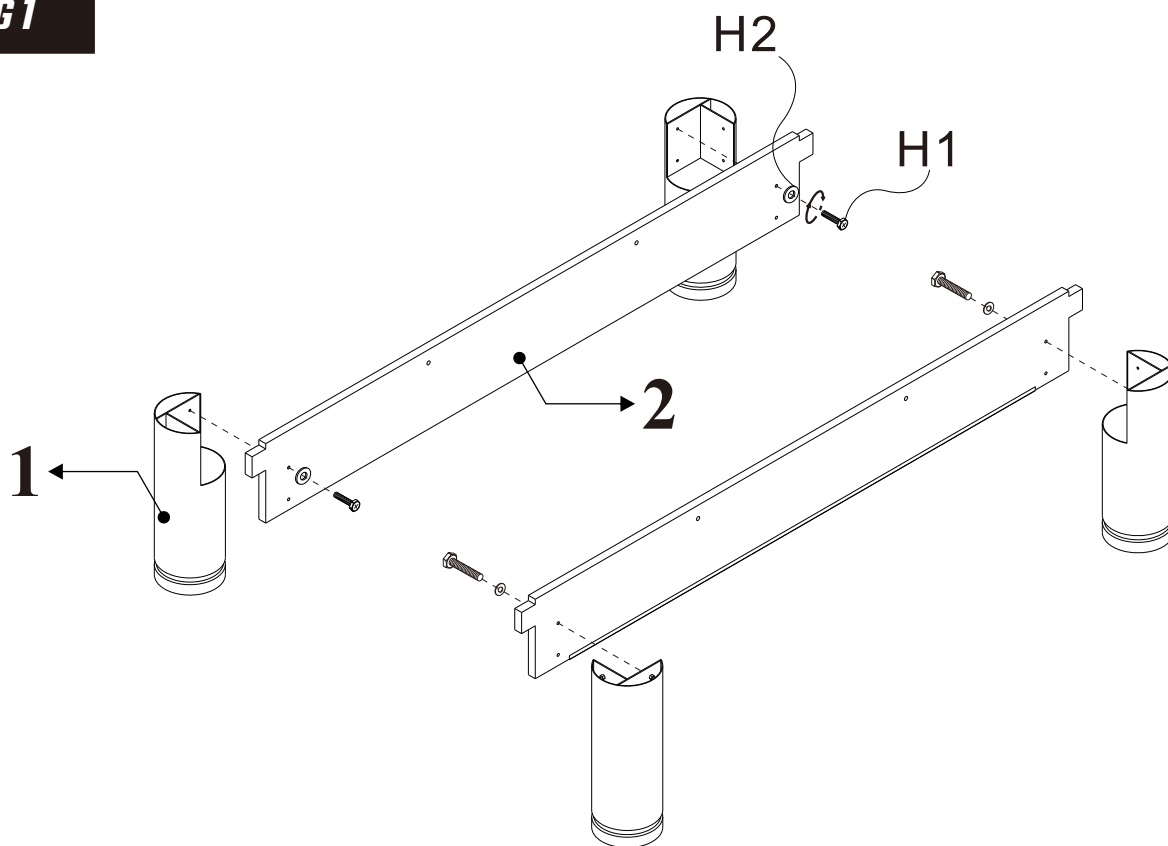


FIG 2

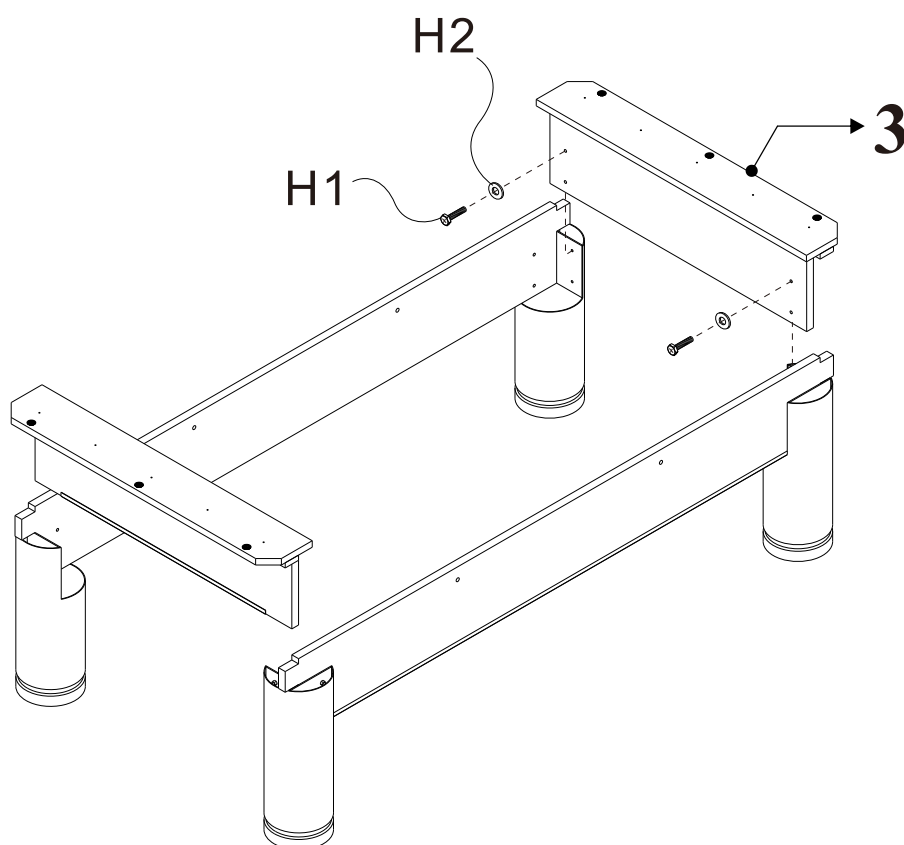


FIG 3



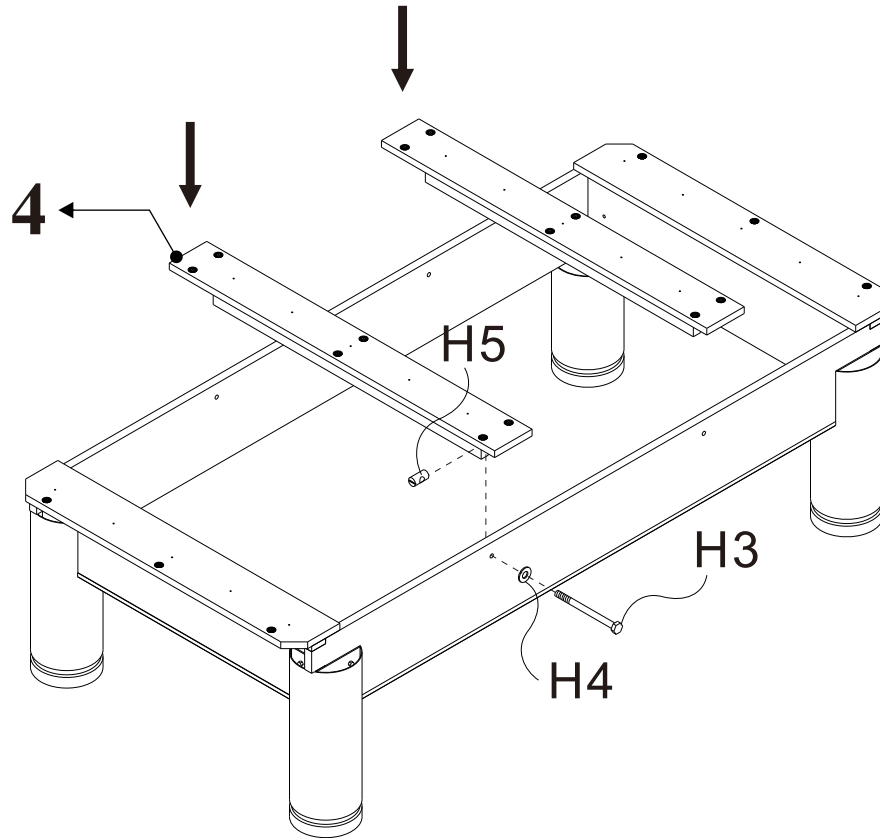


FIG 4

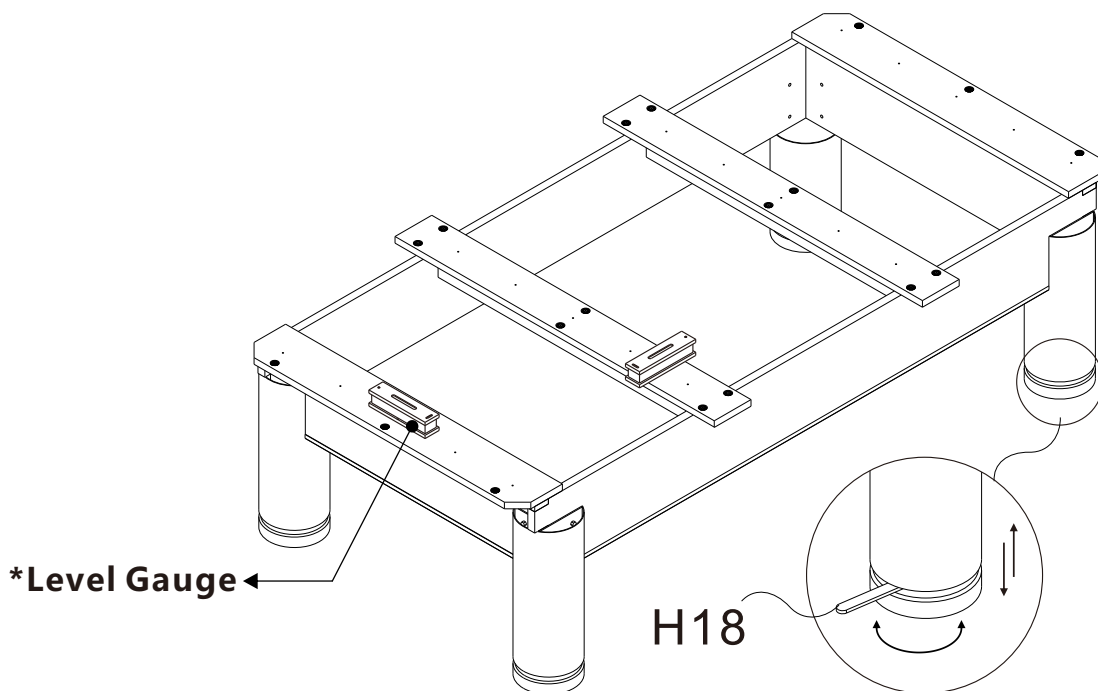


***Turn the leg levelers with wrench to adjust the levelness of table cabinet.**

FIG 5

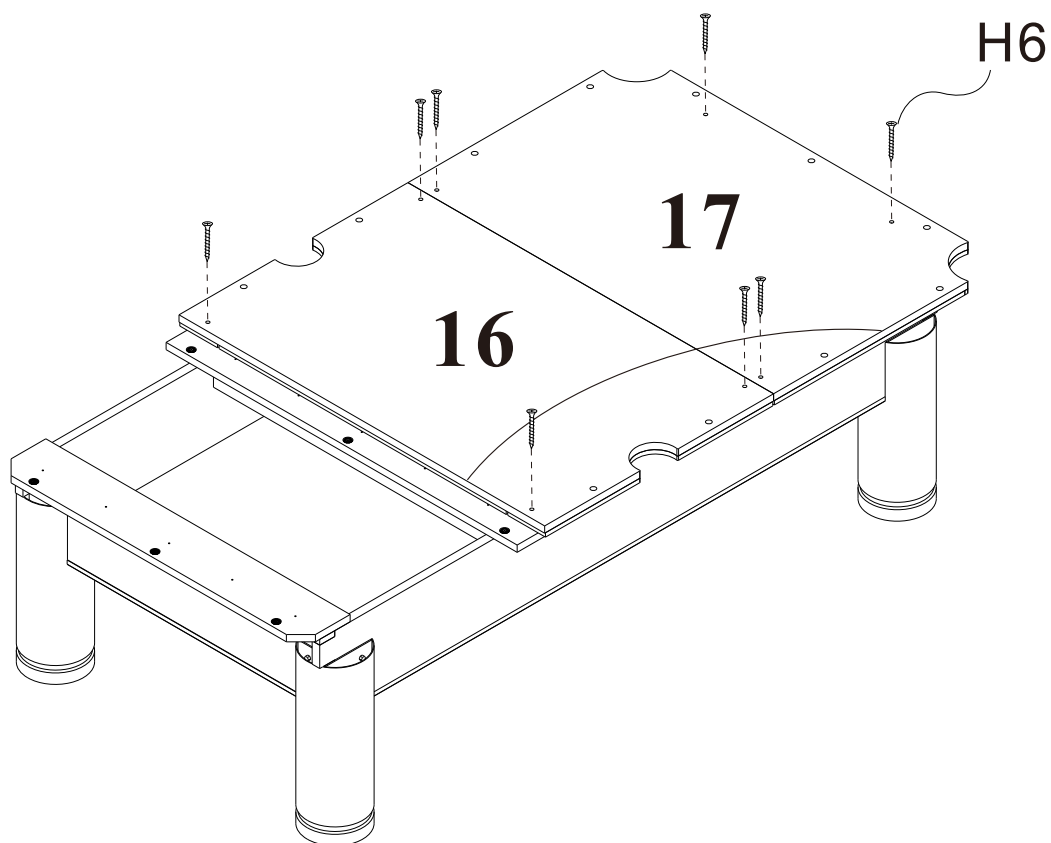

***Level slate with 18 LevelBox adjusters. Tighten the nut after Leveling the slate.**

FIG 6

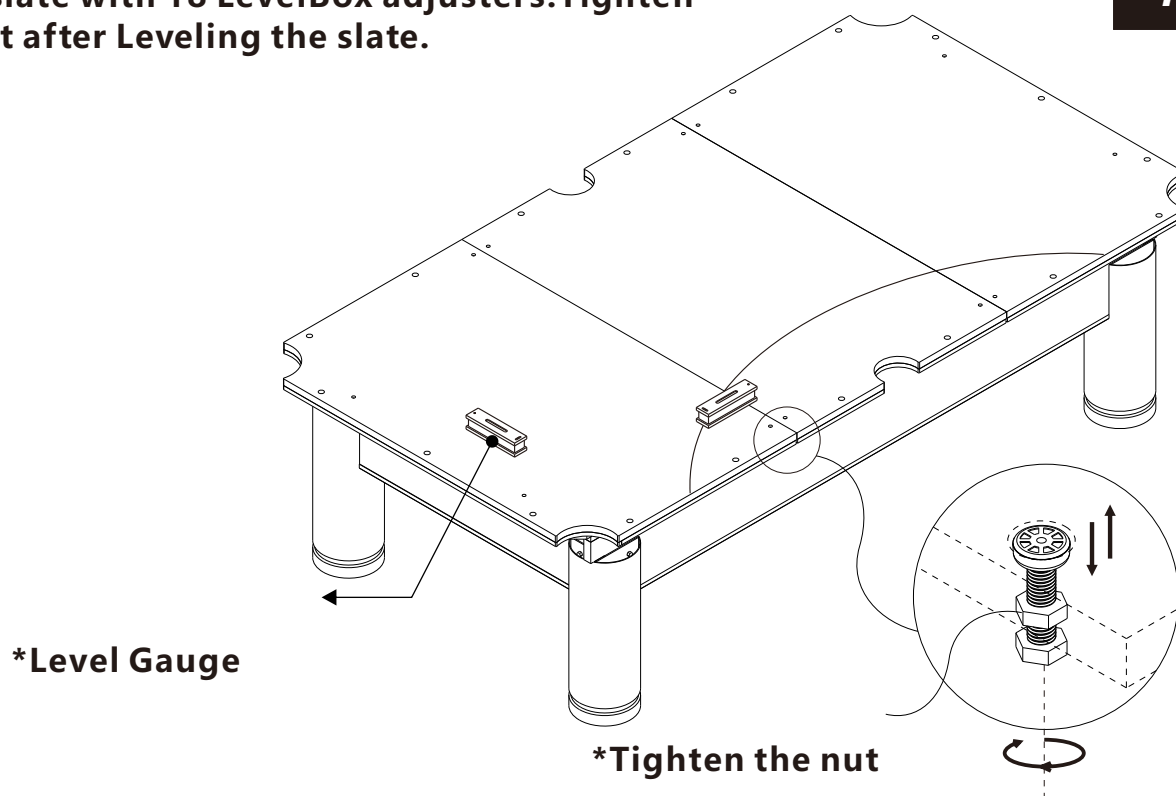

[illegible]

***Cut holes in cloth at rail both locations.**



***Pre-attach the H7&H8 bolts, then tighten them after attaching the Corner Pocket 11 and Middle Pocket 12 to rails**

***Pre-attach the H7&H8 bolts, then tighten them after attaching the Corner Pocket 11 and Middle Pocket 12 to rails**

FIG 9


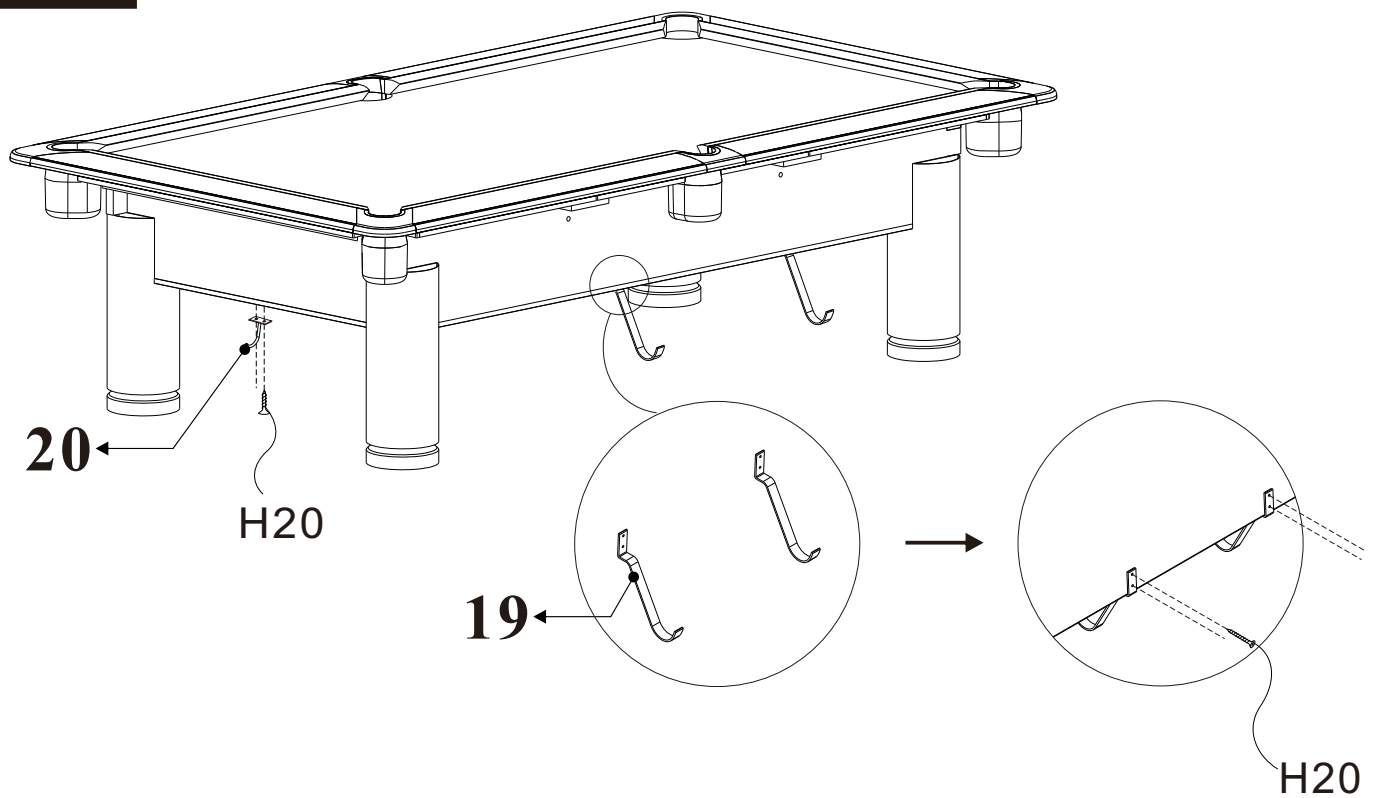


FIG 10



FINISH

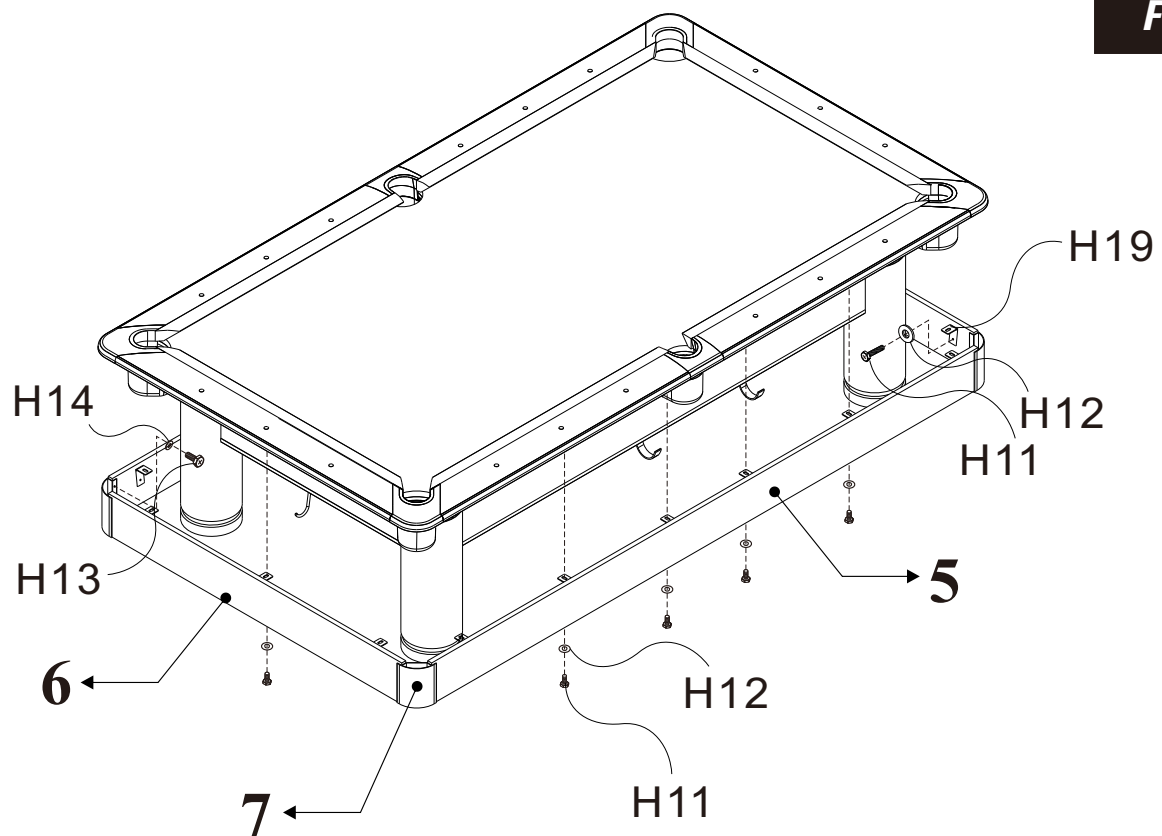